


USB-NORA-W256

AWS IoT ExpressLink Multiradio development kit User guide

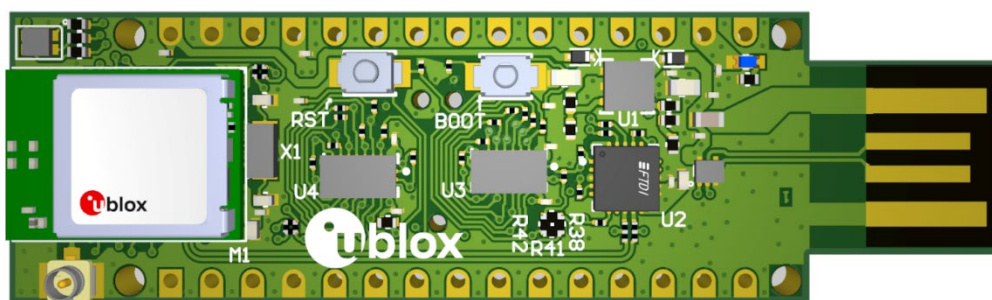

Abstract

This document describes how to set up and use the USB-NORA-W2 evaluation board for prototyping NORA-W2 series with extremely low-powered Internet of Things (IoT) applications. It provides instructions for getting started with the evaluation board and includes a technical overview of the USB-NORA-W2 series modules.

Document information

Title	USB-NORA-W256AWS	
Subtitle	AWS IoT ExpressLink Multiradio development kit	
Document type	User guide	
Document number	UBX-21045749	
Revision and date	R01	19-Nov-2021
Disclosure restriction	C1-Public	

This document applies to the following products:

Product name	Ordering code	Type number	Software version	IN/PCN reference
USB-NORA-W256AWS	USB-NORA-W256AWS	USB-NORA-W256-00	0.1	N/A

u-blox or third parties may hold intellectual property rights in the products, names, logos and designs included in this document. Copying, reproduction, modification or disclosure to third parties of this document or any part thereof is only permitted with the express written permission of u-blox.

The information contained herein is provided "as is" and u-blox assumes no liability for its use. No warranty, either express or implied, is given, including but not limited to, with respect to the accuracy, correctness, reliability and fitness for a particular purpose of the information. This document may be revised by u-blox at any time without notice. For the most recent documents, visit www.u-blox.com.

Copyright © u-blox AG.

Contents

Document information	2
Contents	3
1 Introduction	4
1.1 NORA-W2 series stand-alone modules	4
1.2 USB-NORA-AWS evaluation board	5
1.3 Kit includes	5
1.4 User provided items	6
1.5 Purchasable third-party items	6
1.6 Key features	6
1.6.1 Pre-provisioned with AWS cloud	6
1.6.2 Simple integration with stateless commands	6
1.6.3 Wi-Fi 802.11b/g/n	6
1.6.4 Enhanced security features	6
2 Getting started	7
2.1.1 Setting up the host	7
2.1.2 Verifying evaluation board connection	8
2.1.3 AWS account and permissions for IoT development	8
3 Registering an AWS IoT ExpressLink in your development account	9
3.1 Setting up and connecting to Wi-Fi	10
3.2 Validating the onboarding process	10
4 Connecting and interacting with AWS cloud	11
4.1 Connecting	11
4.2 Send data to AWS cloud	11
4.3 Receiving data and commands from AWS cloud	12
5 Troubleshooting	12
Related documentation	13
Revision history	13
Contact	14

1 Introduction

The demonstrator USB-NORA-AWS evaluation kit comprises a small 16x22 mm evaluation board that conveniently exposes the supported interfaces of the NORA-W2 module that is mounted directly on the board. The board has a USB form factor and plugs directly into the USB port of your computer.

 This document explains how to setup the USB-NORA-W256AWS evaluation kit that includes the USB-NORA-W256AWS evaluation board and NORA-W2 module. Note that the module has not yet been provisioned in production for commercial use, which means that the provisioned security certificate and associated keys are not for use in production.

1.1 NORA-W2 series stand-alone modules

NORA-W2 stand-alone, multiradio modules integrate a powerful 32-bit, dual core microcontroller unit (MCU) and radio for wireless communication. The radio provides support for Wi-Fi 802.11b/g/n in the 2.4 GHz ISM band.

The embedded AWS IoT ExpressLink compliant software includes secured certificates that are pre-flashed in the modules. This allows the module to provide “out of the box” connectivity with Amazon Web Services (AWS) with no effort from the customer. It also supports secure Host and Firmware Over the Air (OTA) upgrades to sustain a high level of quality. Control and data communication is done through the module with stateless AT-commands over a serial interface.

The Evaluation kit supports modification of the endpoint to your development account. In the commercial releases of this module this endpoint is pre-defined to the u-blox staging account and is managed through ownership transfer process through AWS Multi Account Registration.

The NORA-W2 AWS IoT ExpressLink grants OEM ownership transferal through the AWS Multi Account Registration (MAR) process. Fleet management, monitoring, and security auditing is supported by AWS IoT Device Management and AWS IoT Device Defender.

NORA-W2 includes the wireless MCU, flash memory, crystal, and components for matching, filtering, antenna and decoupling, making it a very compact stand-alone multiradio module. The module can be used to design solutions with top-grade security, thanks to integrated cryptographic hardware accelerators. This enables secure boot, which ensures the module boots up only in the presence of authenticated software. The small size and the embedded security capabilities make NORA-W2 ideal for critical IoT applications where security is important. Intended applications include consumer products, telematics, low power sensors, connected factories, connected buildings (appliances and surveillance), point-of-sales, and health devices.

The NORA-W2 series is globally certified, and this reduces time to market for the end-product. To ensure operation in harsh professional environments, the modules are of a professional grade that are qualified according to ISO 16750 and support an extended temperature range of -40 °C to +85 °C.

See also the NORA-W2 series data sheet [1].

1.2 USB-NORA-AWS evaluation board

The u-blox USB-NORA-W25xAWS¹ is a versatile development platform that allows quick prototyping of a variety of extremely low-powered Internet of Things (IoT) applications. The radio provides support for Wi-Fi 802.11 b/g/n in the 2.4 GHz ISM band and Bluetooth Low Energy 5.0².

USB-NORA-W25xAWS boards are available in the following two variants that accommodate alternative antenna options:

- USB-NORA-W251AWS, with NORA-W251AWS module pre-flashed with AWS IoT ExpressLink compliant software, and U.FL antenna connector for connecting an external antenna.
- USB-NORA-W256AWS, with NORA-W251AWS module pre-flashed with AWS IoT ExpressLink compliant software that includes an internal PCB antenna.

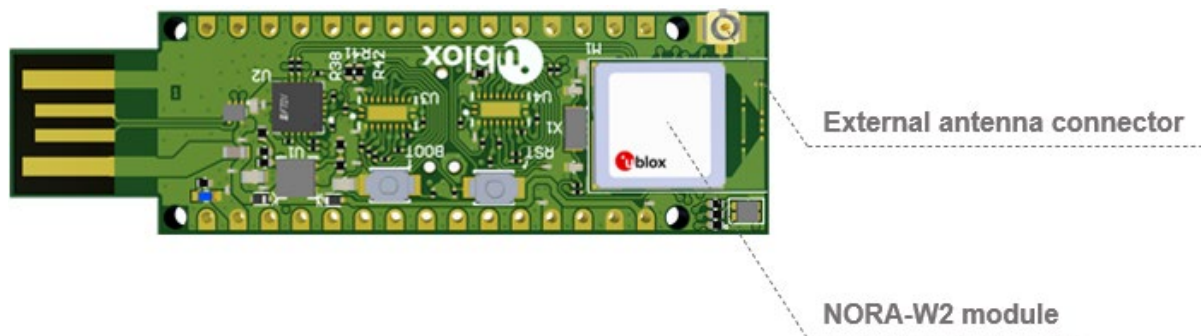


Figure 1: USB-NORA-W251AWS evaluation board (not yet available)

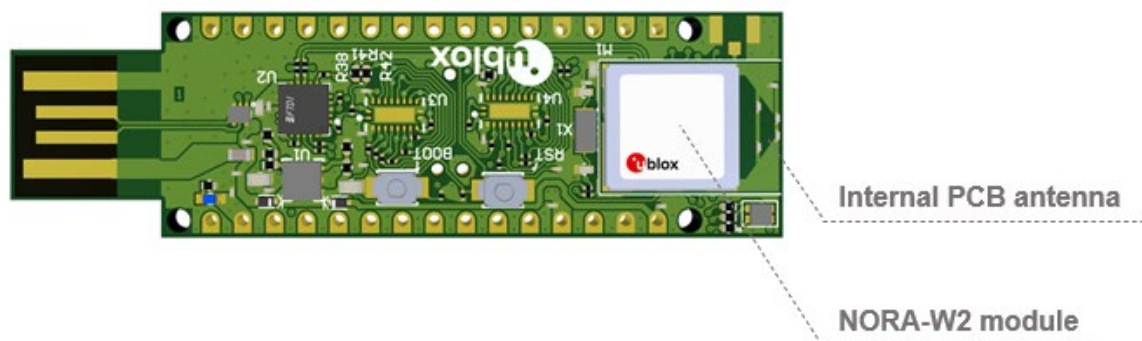


Figure 2: USB-NORA-W256AWS evaluation board

1.3 Kit includes

USB-NORA-W256AWS evaluation board with USB connector. The NORA-W2 module is mounted on the evaluation board.

With a USB Type A form factor, the USB-NORA-W256AWS evaluation board is inserted directly into the PC host. For more information, see also the [USB-NORA-W2 product web page](#).

¹ USB-NORA-W25xAWS refers to all antenna variants of development kit.

² Bluetooth Low Energy is currently not supported in the AWS IoT ExpressLink AT command manual [6].

1.4 User provided items

Item	Description
PC	Computer with USB type A port
Wi-Fi Access Point/Router	Wi-Fi Access Point with public internet access. WPA, WPA2 or WPA3 Wi-Fi authentication must be supported.

Table 1: User provided items

1.5 Purchasable third-party items

No additional items are required.

1.6 Key features

1.6.1 Pre-provisioned with AWS cloud

With the demonstrator USB-NORA-AWS evaluation kit, the user needs to manually register the device in their own AWS account. This manual process is only applicable to the demonstrator version of the evaluation board and is subject to change. The manual process of [Registering an AWS IoT ExpressLink in your development account](#).

 The production release of the NORA-W256AWS module is provisioned with securely stored keys and certificates for secure connection to the AWS cloud during production. No module setup, apart from the verification of Wi-Fi credentials, is required to connect the end-product to the AWS cloud.

1.6.2 Simple integration with stateless commands

Communication from the host to the module is performed using a simple and easy-to-use AT-command set over a serial interface. The USB-NORA-W2 evaluation board is designed to conveniently insert into a computer USB port for prototyping and development.

For details about the supported commands, see also the AWS AT-command information on the AWS IoT ExpressLink developer page [4].

1.6.3 Wi-Fi 802.11b/g/n

USB-NORA-W2 communicates with the AWS Cloud over Wi-Fi 4.

1.6.4 Enhanced security features

The NORA-W2³ module contains a multistage secure boot that ensures that the running software, as well as the hardware, is authentic. All provisioned certificates and keys are stored in the secure memory of the module and cannot be read or modified externally. NORA-W2 supports MQTT TLS 1.2 and Wi-Fi WPA, WPA2 and WPA3 authentication protocols for internet communication. The early demonstrator kits hosting the module have security limitations⁴.

³ NORA-W2 refers to the module mounted on the development board


⁴ The NORA-W2 module included in the demonstrator version of the development board has temporary certificates and are not securely stored

2 Getting started

2.1.1 Setting up the host

Use the following procedure to set up the USB-NORA-W2 evaluation board on a host machine. Any operating system is supported that supports running a terminal application.

1. Connect USB-NORA-W256 to the host machine
2. Open a terminal application on your host machine, like TeraTerm for Windows or CoolTerm for Mac.
3. Select the port corresponding to the evaluation kit. Consult the documentation for your operating system to find out how to detect the port used by the evaluation kit.
4. Configure the terminal application as follows:
 - Baudrate: 115200
 - Bits: 8
 - Parity: None
 - Stop: 1
 - Flow control: None
 - Local Echo: Yes
 - End of Line: Line Feed

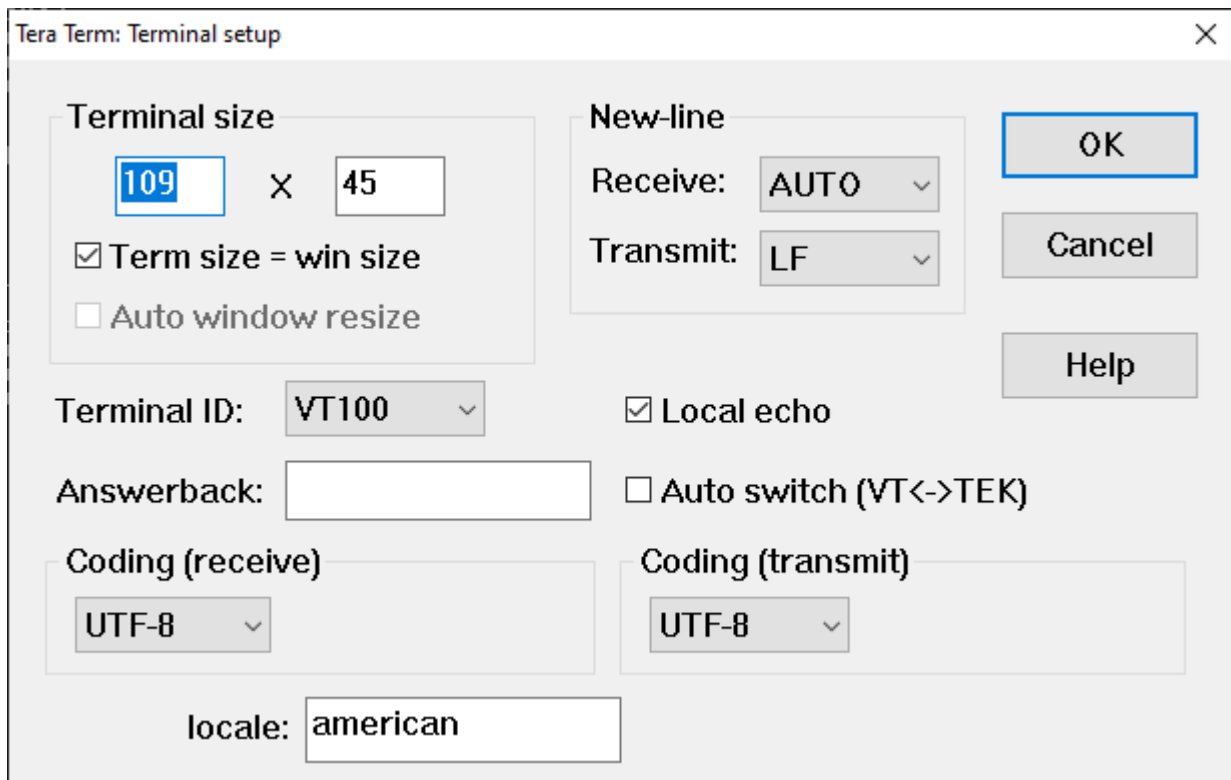

Tera Term: Terminal setup

Terminal size: 109 X 45

☒ Term size = win size

☐ Auto window resize

New-line: Receive: AUTO, Transmit: LF

Terminal ID: VT100

☒ Local echo

Answerback:

☐ Auto switch (VT<->TEK)

Coding (receive): UTF-8

Coding (transmit): UTF-8

locale: american


OK, Cancel, Help

Figure 3: TeraTerm configuration example

2.1.2 Verifying evaluation board connection

Verify that you have a working connection to the evaluation board:

1. Open the terminal window
2. Type “AT” and press return.
3. Verify that a “OK” is written in the terminal windows, as shown in Figure 4. This confirms that the connected the evaluation kit is successfully connected to your host machine.

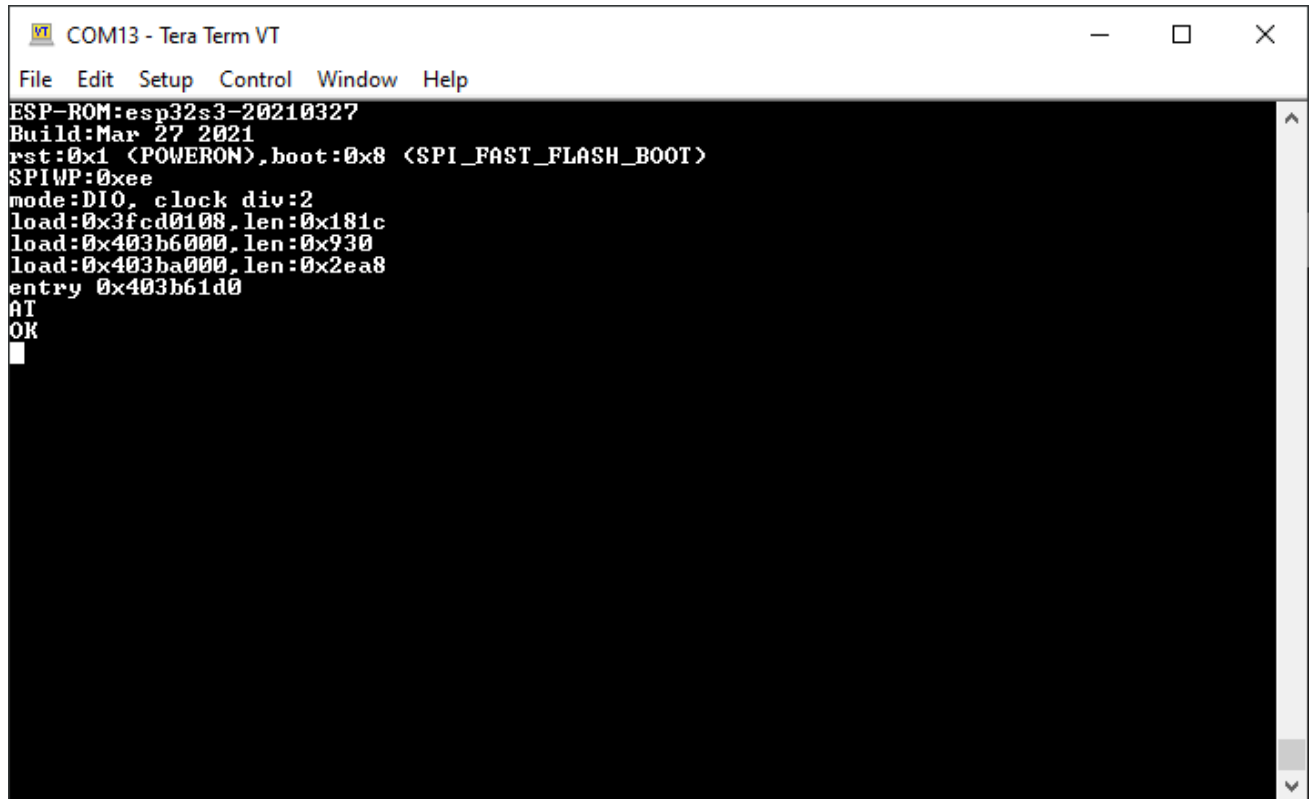

```

COM13 - Tera Term VT
File Edit Setup Control Window Help
ESP-ROM:esp32s3-20210327
Build:Mar 27 2021
rst:0x1 (POWERON), boot:0x8 (SPI_FAST_FLASH_BOOT)
SPIWP:0xee
mode:DIO, clock div:2
load:0x3fcd0108, len:0x181c
load:0x403b6000, len:0x930
load:0x403ba000, len:0x2ea8
entry 0x403b61d0
AT
OK

```

Figure 4: AT test command response and boot



Keep the terminal open, as it is needed for [Connecting and interacting with AWS cloud](#) and [Troubleshooting](#).

2.1.3 AWS account and permissions for IoT development

Go to “Set up your AWS account” [2] and complete the following tasks:

- Sign up for an AWS account
- Create a user and grant permissions
- Open the AWS IoT console

See also [Registering an AWS IoT ExpressLink in your development account](#).

3 Registering an AWS IoT ExpressLink in your development account

To create an IoT “Thing” and add it to your account you must retrieve the AWS IoT ExpressLink “Thing Name” and the corresponding certificate of the module. The “Thing name” is a sequence as characters that identifies the NORA-W2 module and its virtual cloud representation.

Follow the procedure below to register your development account using the AWS Management Console [5]⁵¹.

1. Open the AWS IoT Console.
2. Select **Manage** then select **Things**.
3. Choose **Create things**, select **Create single thing**, and then click **Next**.
4. In the terminal application, type the command: `AT+CONF? ThingName` and copy the returned string (a sequence of alphanumeric characters) from terminal.
5. On the **Specify thing properties** page, paste the copied string from terminal into the **Thing name** under **Thing properties** on the console. Leave all other fields as default, then click **Next**.
6. In the terminal application, type the command: `AT+CONF? Certificate`
7. Copy the returned string (a longer sequence of alphanumeric symbols) and save the string as a text file called “ThingName.cert.pem” on your host machine.
8. On the **Configure device certificate** page, select **Use my certificate** and choose **CA is not registered with AWS IoT**.
9. Under **Certificate**, select **Choose file** and then double click on the “ThingName.cert.pem” file created in step 5.
10. Under **Certificate Status**, select **Active**.
11. Click **Next** to **Attach policies to certificate**.
12. On the **Attach policies to certificate page**, select **Create policy** (opens a new window).
13. Include the policy name (e.g., IoTDevPolicy) and click **Advanced mode**.
14. Copy the following code snippet into the console.

```
{ "Version": "2012-10-17", "Statement": [ { "Effect": "Allow", "Action": "*",
"Resource": "*" } ] }
```

15. Click **Create** to complete policy creation.
16. Close **Create a policy** window and return to **Create single thing** window.
17. Select the newly created **IoTDevPolicy** as policy.
18. Click **Create thing** to complete the Thing creation.
19. In the AWS IoT Console, choose **Settings**, copy the “Endpoint” string of your account under **Device data endpoint**.
20. In the terminal application, type the following command for example:

```
AT+CONF Endpoint=a3ixxxxxxxxx7i2-ats.iot.eu-north-1.amazonaws.com
```



The examples in this document are intended only for development environments. All devices in your production fleet must have credentials with privileges that authorize only intended actions on specific resources. The specific permission policies can vary for your use case. Identify the permission policies that best meet your business and security requirements. For more information, see also “Security best practices in AWS IoT Core” in the AWS documentation [6].

⁵ The steps described in the section uses the “New console experience” of the AWS IoT Console.

3.1 Setting up and connecting to Wi-Fi

The USB-NORA-W256AWS evaluation board requires access to a local Wi-Fi router to connect to the internet.

Enter the required security credentials and enter the following commands in your terminal application:


```
AT+CONF SSID=<your router SSID>
AT+CONF Passphrase=<your router passphrase>
```

 The SSID and passphrase of your local router are stored securely inside the AWS IoT ExpressLink module. While the SSID can be retrieved later (for debugging purposes and so on) any attempt to retrieve the Passphrase will return an error.

3.2 Validating the onboarding process

Having completed all previous steps in this chapter, enter the command `AT+CONNECT` in your Terminal application to validate the onboarding process, as shown in Figure 5.

OK CONNECTED confirm successful connection with the cloud.

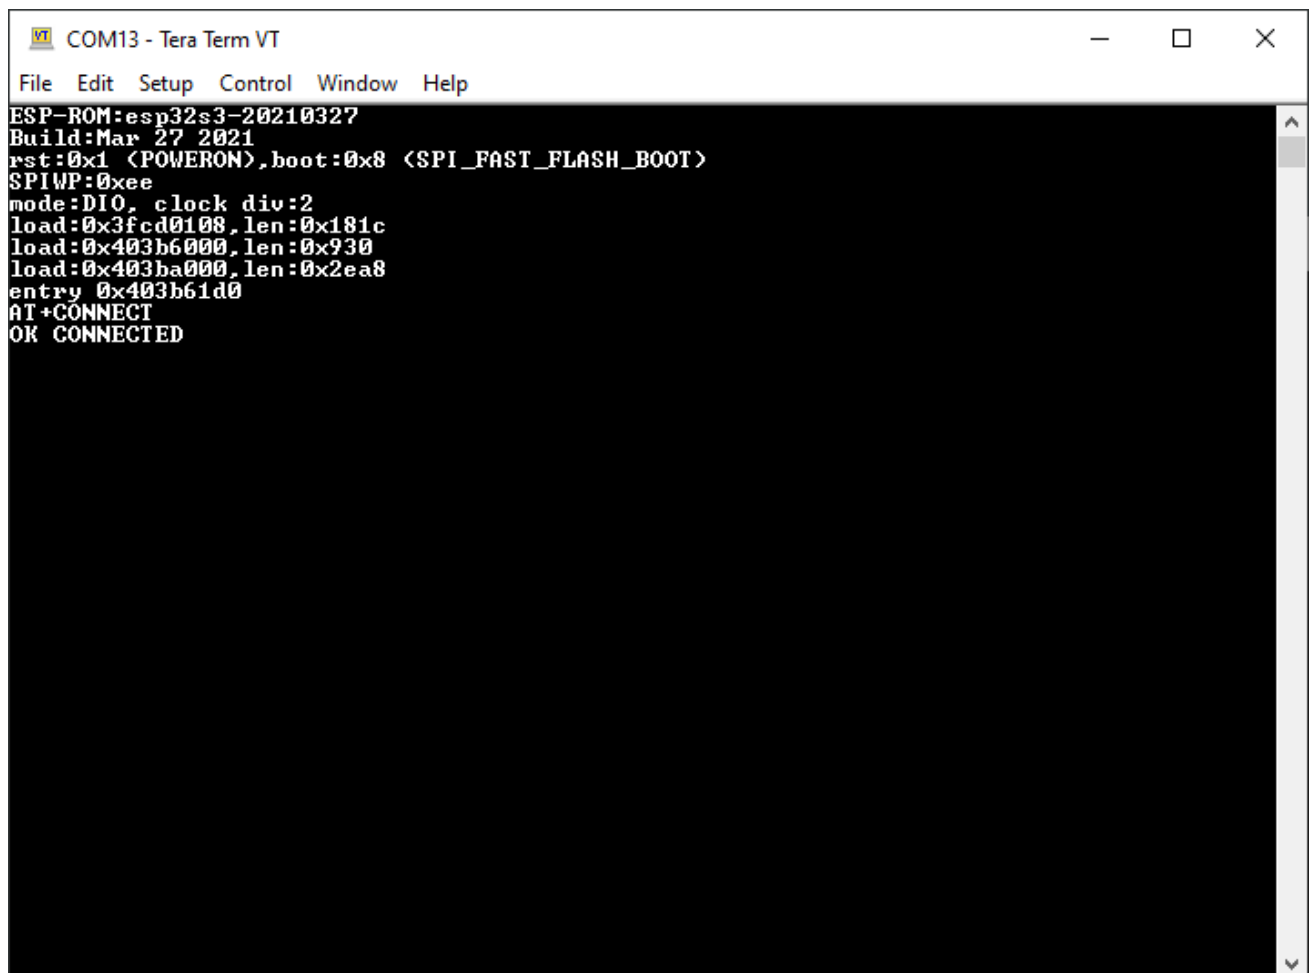

```
COM13 - Tera Term VT
File Edit Setup Control Window Help
ESP-ROM:esp32s3-20210327
Build:Mar 27 2021
rst:0x1 (POWERON),boot:0x8 (SPI_FAST_FLASH_BOOT)
SPIWP:0xee
mode:DIO, clock div:2
load:0x3fcd0108,len:0x181c
load:0x403b6000,len:0x930
load:0x403ba000,len:0x2ea8
entry 0x403b61d0
AT+CONNECT
OK CONNECTED
```

Figure 5: Successful CONNECTED

 You have now completed the registration of the evaluation kit as a Thing in your IoT account. As the AWS IoT ExpressLink remembers its configuration, the module automatically accesses your registered AWS account the next time you connect.

4 Connecting and interacting with AWS cloud

Use the MQTT client in the AWS IoT console to monitor the communication between your evaluation kit and the AWS Cloud.

1. Navigate to the AWS IoT console [3].
2. In the navigation pane, select **Test** and then **MQTT Test Client** to open the MQTT client.
3. In **Subscribe to a topic**, enter #. The multi-level wildcard subscribes and listens to all payloads published to your account.
4. Click **Subscribe**.

4.1 Connecting

In your terminal application, enter the command `AT+CONNECT` to establish a secure connection. `OK CONNECTED` confirms successful connection to the cloud.

4.2 Send data to AWS cloud

To check communication with the MQTT test client:

1. In your terminal application, enter the command: `AT+SEND /data Hello World!` After a short delay, terminal returns the prompt `OK` to confirm that the command has been sent.
2. Check that the message “Hello World!” is now displayed on the AWS IoT console under the topic “data”, as shown in Figure 6.

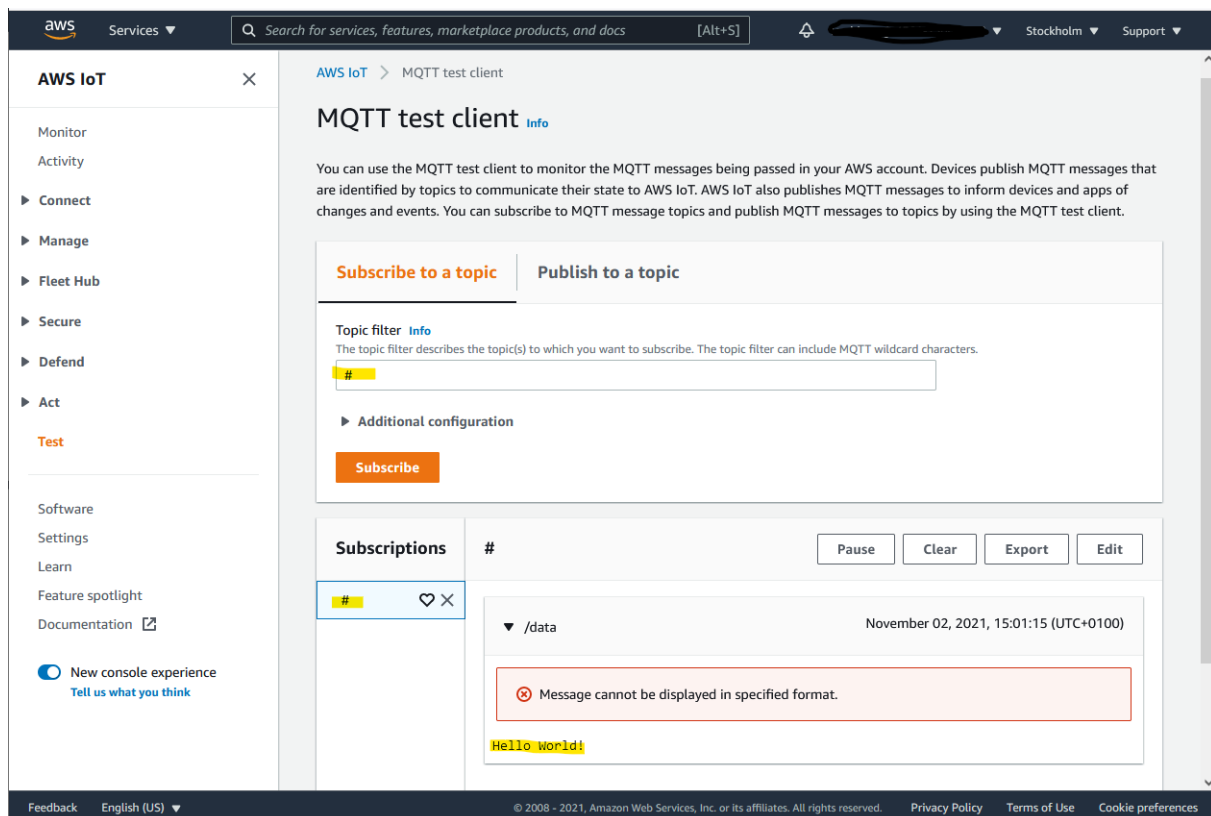


Figure 6: MQTT test client in AWS IoT console

4.3 Receiving data and commands from AWS cloud

Use your terminal application and AWS IoT console to check the receipt of data and commands from the AWS cloud.

Enter the commands below in the terminal application to subscribe to a topic:

1. Enter the command `AT+CONF Topic1=/MyTopic`. After a short delay, terminal returns the prompt OK to confirm that the command has been sent.
2. Enter the command `AT+SUBSCRIBE1`

Enter the commands below in the AWS IoT console to publish a message on the same topic:

3. Select Publish to a topic
4. in Topic name field, type "MyTopic".
5. Enter the text "Hello from the AWS IoT console" message then click "Publish"

In the terminal application:

6. Enter the command `AT+GET1`. The message "OK Hello from the AWS IoT console" is returned at the prompt.

5 Troubleshooting

For common AT command issues, see the AWS IoT ExpressLink developer page [4].

Related documentation

- [1] NORA-W2 series data sheet, [UBX-21046925](#)
- [2] Set up your AWS account, <https://docs.aws.amazon.com/iot/latest/developerguide/setting-up.html>
- [3] AWS IoT ExpressLink main page, <https://aws.amazon.com/iot-expresslink>
- [4] AWS IoT ExpressLink developer page, <https://docs.aws.amazon.com/expresslink>
- [5] AWS Management Console, <https://aws.amazon.com/console/>
- [6] Security best practices in AWS IoT Core, <https://docs.aws.amazon.com/iot/latest/developerguide/security-best-practices.html>



For product change notifications and regular updates of u-blox documentation, register on our website, www.u-blox.com.

Revision history

Revision	Date	Name	Comments
R01	19-Nov-2021	magj	Initial release for demonstrator variant

Contact

For complete contact information, visit us at www.u-blox.com.

u-blox Offices

North, Central and South America

u-blox America, Inc.

Phone: +1 703 483 3180
Email: info_us@u-blox.com

Regional Office West Coast:

Phone: +1 408 573 3640
Email: info_us@u-blox.com

Technical Support:

Phone: +1 703 483 3185
Email: support_us@u-blox.com

Headquarters

Europe, Middle East, Africa

u-blox AG

Phone: +41 44 722 74 44
Email: info@u-blox.com
Support: support@u-blox.com

Asia, Australia, Pacific

u-blox Singapore Pte. Ltd.

Phone: +65 6734 3811
Email: info_ap@u-blox.com
Support: support_ap@u-blox.com

Regional Office Australia:

Phone: +61 3 9566 7255
Email: info_au@u-blox.com
Support: support_ap@u-blox.com

Regional Office China (Beijing):

Phone: +86 10 68 133 545
Email: info_cn@u-blox.com
Support: support_cn@u-blox.com

Regional Office China (Chongqing):

Phone: +86 23 6815 1588
Email: info_cn@u-blox.com
Support: support_cn@u-blox.com

Regional Office China (Shanghai):

Phone: +86 21 6090 4832
Email: info_cn@u-blox.com
Support: support_cn@u-blox.com

Regional Office China (Shenzhen):

Phone: +86 755 8627 1083
Email: info_cn@u-blox.com
Support: support_cn@u-blox.com

Regional Office India:

Phone: +91 80 405 092 00
Email: info_in@u-blox.com
Support: support_in@u-blox.com

Regional Office Japan (Osaka):

Phone: +81 6 6941 3660
Email: info_jp@u-blox.com
Support: support_jp@u-blox.com

Regional Office Japan (Tokyo):

Phone: +81 3 5775 3850
Email: info_jp@u-blox.com
Support: support_jp@u-blox.com

Regional Office Korea:

Phone: +82 2 542 0861
Email: info_kr@u-blox.com
Support: support_kr@u-blox.com

Regional Office Taiwan:

Phone: +886 2 2657 1090
Email: info_tw@u-blox.com
Support: support_tw@u-blox.com