

# High Performance, General-Purpose, PID Control Temperature Controller

## ■ Features

- 50ms high-speed sampling rate and  $\pm 0.3\%$  display accuracy
- Simultaneous heating and cooling control function
- Automatic/manual control option
- Switch between current output and SSR drive output
- SSR drive output (SSRP function) control options: ON/OFF control, cycle control, phase control
- Communication output models available: RS485 (Modbus RTU)
- Parameter configuration via PC (RS485 communication)
  - DAQMaster software included (comprehensive device management software)
  - Communication converter sold separately
    - : SCM-WF48 (Wi-Fi to RS485-USB wireless communication converter),
    - SCM-US48I (USB to RS485 converter), SCM-38I (RS232C to RS485 converter),
    - SCM-US (USB to serial converter)
- User-friendly parameter features (via DAQMaster)
- SV preset function (up to 4 set values) using digital input terminals
- Heater disconnect alarm function (CT input)
  - Current transformer (CT) sold separately: CSTC-E80LN, CSTC-E200LN, CSTS-E80PP
- Various input types and temperature ranges



Please read "Safety Considerations" in the instruction manual before using.



(S) SENSORS

(C) CONTROLLERS

(M) MOTION DEVICES

(D) SOFTWARE

(J) Temperature Controllers

(K) SSRs

(L) Power Controllers

(M) Counters

(N) Timers

(O) Digital Panel Meters

(P) Indicators

(Q) Converters

(R) Digital Display Units

(S) Sensor Controllers

(T) Switching Mode Power Supplies

(U) Recorders

(V) HMIs

(W) Panel PC

(X) Field Network Devices

## ■ Manual

- For the detail information and instructions, please refer to the user manual and user manual for communication, and be sure to follow cautions written in the technical descriptions (catalog, website). Visit our website ([www.autonics.com](http://www.autonics.com)) to download manuals.
- User manual describes for specifications and function, and communication manual describes for RS485 communication (Modbus RTU protocol) and parameter address map data.


## ■ Comprehensive Device Management Program (DAQMaster)

- DAQMaster is comprehensive device management program. It is available for parameter setting, monitoring, and user parameter group setting, parameter mask setting for only TK4 Series.
- Visit our website ([www.autonics.com](http://www.autonics.com)) to download user manual and comprehensive device management program.

< Computer specification for using software >

Item	Minimum requirements
System	IBM PC compatible computer with Intel Pentium III or above
Operating system	Microsoft Windows 98/NT/XP/Vista/7/8/10
Memory	256MB or more
Hard disk	More than 1GB of free hard disk space
VGA	1024x768 or higher resolution display
Others	RS-232 serial port (9-pin), USB port

< DAQMaster screen >

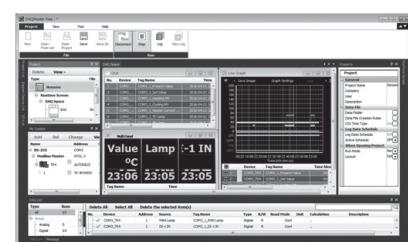

# TK Series

## Ordering Information

※1. 11Pin socket(PG-11, PS-11(N)): Sold separately

※2. In case of TK4N/TK4SP Series, option control output selection and digital input will be limited due to number of terminals.

※※※ The CT input model of TK4N is selectable only for standard model which has alarm 1.

※4. The Heating & Cooling model of TK4N-1□□□ has only alarm output 2.

※4. The Heating & Cooling model of TK4N-T□□□ has only alarm output 2.  
※5. Only for TK4S-D□□□, OUT2 output terminal is used as DI-2 input terminal.

※5. Only for TK43-B□□□, etc.

※6. Does not support in TR4N.  
※7. "S" represents SSR drive output support models which SSRP function (standard ON/OFF, cycle, phase)control are available. "C" represents selectable current and SSR drive output support models.

※8 Does not support in AC/DC voltage type model

※8. Does not support in AC/DC Voltage type model.  
※9. Select "B" or "C" type in case of using heating & cooling control. "N" type in case of using standard control.

※9. Select "R" or "C" type in case of using heating & cooling control. "N" type in case of using standard control.  
 ※10. In case of Relay OUT2 model, alarm output 3 is available only when control output operation mode [ $\square - F_t$ ] is set heating [ $H E R t$ ] or cooling [ $C o o L$ ]. In case of current output, trans. output 2 is available only when control output operation mode [ $\square - F_t$ ] is set heating [ $H E R t$ ] or cooling [ $C o o L$ ].

# High Performance, General-Purpose, PID Control

## ■ Specifications

Series	TK4N	TK4SP	TK4S	TK4M	TK4W	TK4H	TK4L
Power supply	AC voltage	100-240VAC~ 50/60Hz					
	AC/DC voltage	—	24VAC~ 50/60Hz, 24-48VDC=				
Allowable voltage range	90 to 110% of rated voltage						
Power consumption	AC voltage	Max. 6VA	Max. 8VA				
	AC/DC voltage	—	Max. 8VA (24VAC 50/60Hz), max. 5W (24-48VDC)				
Display method	7-segment (PV: red, SV: green), other display part (green, yellow, red) LED method						
Character size	PV (W×H)	4.5×7.2mm	7.0×14.0mm	9.5×20.0mm	8.5×17.0mm	7.0×14.6mm	11.0×22.0mm
	SV (W×H)	3.5×5.8mm	5.0×10.0mm	7.5×15.0mm	6.0×12.0mm	6.0×12.0mm	7.0×14.0mm
Input type	RTD	JPt100Ω, DPt100Ω, DPt50Ω, Cu100Ω, Cu50Ω, Nikel 120Ω (6 types)					
	Thermocouple	K(CA), J(IC), E(CR), T(CC), B(PR), R(PR), S(PR), N(NN), C(TT), G(TT), L(IC), U(CC), Platinel II (13 types)					
	Analog	• Voltage: 0-100mVDC=, 0-5VDC=, 1-5VDC=, 0-10VDC= (4 types) • Current: 0-20mA, 4-20mA (2 types)					
Display accuracy	RTD	• At room temperature (23°C±5°C): (PV ±0.3% or ±1°C, select the higher one) ±1-digit <sup>※1</sup> • Out of room temperature range: (PV ±0.5% or ±2°C, select the higher one) ±1-digit ※In case of TK4SP Series, ±1°C will be added.					
	Thermocouple	• At room temperature (23°C±5°C): ±0.3% F.S. ±1-digit • Out of range of room temperature: ±0.5% F.S. ±1-digit					
	Analog	• At room temperature (23°C±5°C): ±0.3% F.S. ±1-digit					
	CT input	±5% F.S. ±1-digit					
Control output	Relay	OUT1, OUT2: 250VAC~ 3A, 30VDC= 3A, 1a					
	SSR	11VDC=±2V 20mA Max.					
	Current	DC4-20mA or DC0-20mA selectable (load 500Ω max.)					
Alarm output	Relay	AL1, AL2: 250VAC~ 3A 1a ※TK4N AL2: 250VAC~ 0.5A 1a (max.125VA), TK4SP has only AL1.					
Option output	Transmission	DC4-20mA (load 500Ω max., accuracy: ±0.3% F.S.)					
	Communication	RS485 communication output (Modbus RTU)					
Option input	CT input	0.0-50.0A (primary heater current value measuring range) ※CT ratio = 1/1000 (except TK4SP)					
	Digital input	• Contact Input: ON - max. 2kΩ, OFF - min. 90kΩ • Non-contact Input: ON - residual voltage max. 1.0VDC=, OFF - leakage current max. 0.1mA • Outflow current: approx. 0.5mA ※TK4S/M: 1 (TK4S-D□□□: 2, TK4SP: none), TK4N/H/W/L: 2					
Control type	Heating, cooling	ON/OFF, P, PI, PD, PID control					
	Heating&cooling						
Hysteresis		• RTD/Thermocouples: 1 to 100°C/F (0.1 to 100.0°C/F) variable • Analog: 1 to 100-digit					
Proportional band (P)		0.1 to 999.9°C/F (0.1 to 999.9%)					
Integral time (I)		0 to 9999 sec					
Derivative time (D)		0 to 9999 sec					
Control period (T)		• Relay output, SSR drive output: 0.1 to 120.0 sec • Current output or SSR drive output selectable: 1.0 to 120.0 sec					
Manual reset value		0.0 to 100.0%					
Sampling period		50ms					
Dielectric strength		2,000VAC 50/60Hz for 1 min (between power source terminal and input terminal)					
Vibration		0.75mm amplitude at frequency of 5 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours					
Relay life cycle	Mechanical	• OUT1/2: min. 5,000,000 times • AL1/2: min. 20,000,000 times (TK4H/W/L: min. 5,000,000 times)					
	Electrical	OUT1/OUT2, AL1/AL2: min. 100,000 operations					
Insulation resistance		Over 100MΩ (at 500VDC megger)					
Noise immunity		±2kV R-phase, S-phase the square wave noise (pulse width: 1μs) by the noise simulator					
Memory retention		Approx. 10 years (when using non-volatile semiconductor memory type)					
Environment	Ambient temperature	-10 to 50°C, storage: -20 to 60°C					
	Ambient humidity	35 to 85%RH, storage: 35 to 85%RH					
Protection structure		IP65 (front panel) ※TK4SP: IP50 (front panel)					
Insulation type		Double insulation or reinforced insulation (mark: □, dielectric strength between the measuring input part and the power part: 2kV)					
Approval							
Weight <sup>※2</sup>	Approx. 140g (approx. 70g)	Approx. 130g (approx. 85g)	Approx. 150g (approx. 105g)	Approx. 210g (approx. 140g)	Approx. 211g (approx. 141g)	Approx. 294g (approx. 198g)	

※1: ◎ At room temperature (23°C±5°C)

- Thermocouple K, J, T, N, E type, below -100°C/Thermocouple L, U, PLII type, RTD Cu50Ω, DPt50Ω : (PV ±0.3% or ±2°C, select the higher one) ±1-digit
- Thermocouple C, G, R, S type, below 200°C: (PV ±0.3% or ±3°C, select the higher one) ±1-digit
- Thermocouple B type, below 400°C: there is no accuracy standards.

◎ Out of room temperature range

- RTD Cu50Ω, DPt50Ω: (PV ±0.5% or ±3°C, select the higher one) ±1-digit
- Thermocouple R, S, B, C, G type: (PV ±0.5% or ±5°C, select the higher one) ±1-digit
- Others, Below -100°C: within ±5°C

In case of TK4SP Series, ±1°C will be added to the degree standard.

※2: The weight includes packaging. The weight in parenthesis is for unit only.

※Environment resistance is rated at no freezing or condensation.

SENSORS

CONTROLLERS

MOTION DEVICES

SOFTWARE

(J) Temperature Controllers

(K) SSRs

(L) Power Controllers

(M) Counters

(N) Timers

(O) Digital Panel Meters

(P) Indicators

(Q) Converters

(R) Digital Display Units

(S) Sensor Controllers

(T) Switching Mode Power Supplies

(U) Recorders

(V) HMIs

(W) Panel PC

(X) Field Network Devices


# TK Series

## Connections


- ※ Please check the polarity when connecting temperature sensor or analog input.
- ※ Standard model has shaded terminals only.
- ※ Operation mode of heating&cooling OUT 2 relay output model is heating or cooling, OUT 2 is available as alarm output 3. (except TK4N Series).
- ※ Operation mode of heating&cooling OUT 2 current output model is heating or cooling, OUT 2 is available as transmission output 2.
- ※ Use terminals of size specified below.

	a	b
<Round>	Min. 3.0mm	Max. 5.8mm
<Forked>	Min. 3.0mm	Max. 5.8mm


### ● TK4N

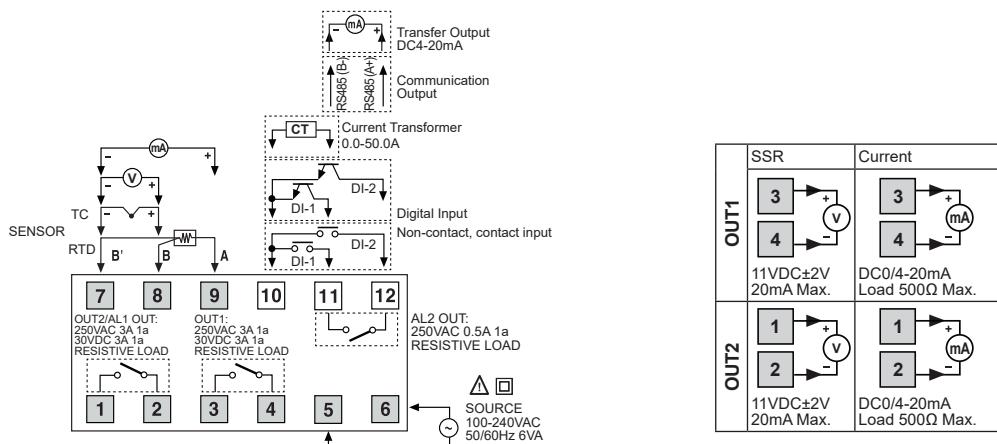

### ● TK4S

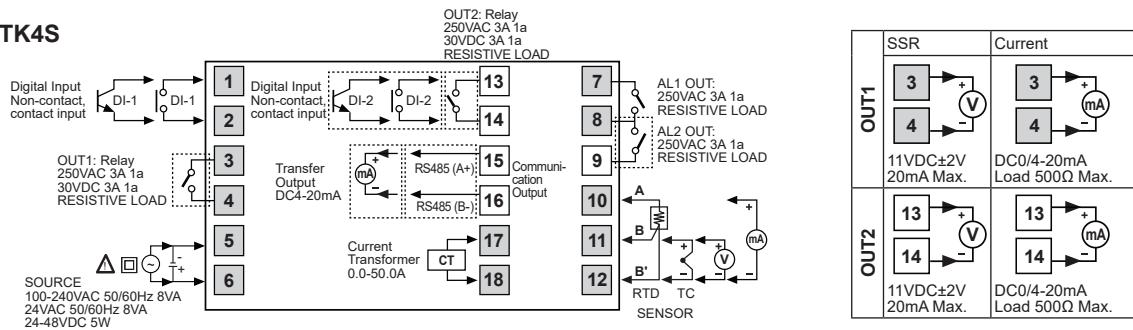


### ● TK4SP

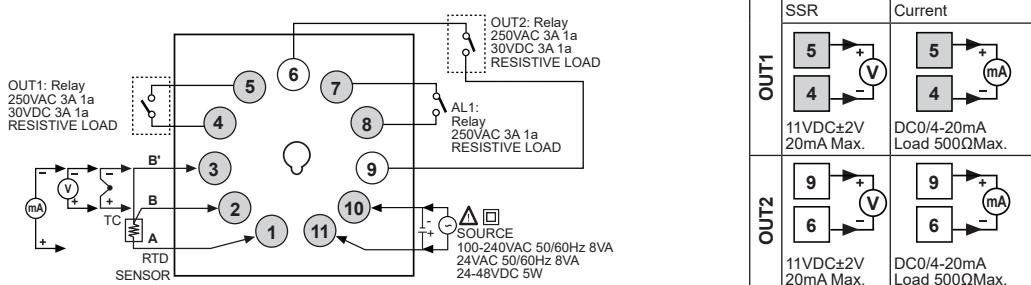


# High Performance, General-Purpose, PID Control

## Connections

### ● TK4M

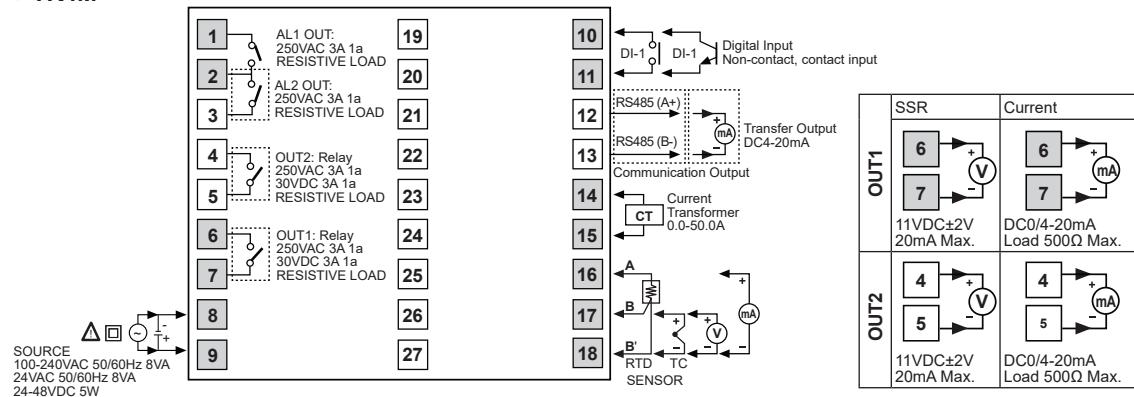


### ● TK4H/TK4W/TK4L

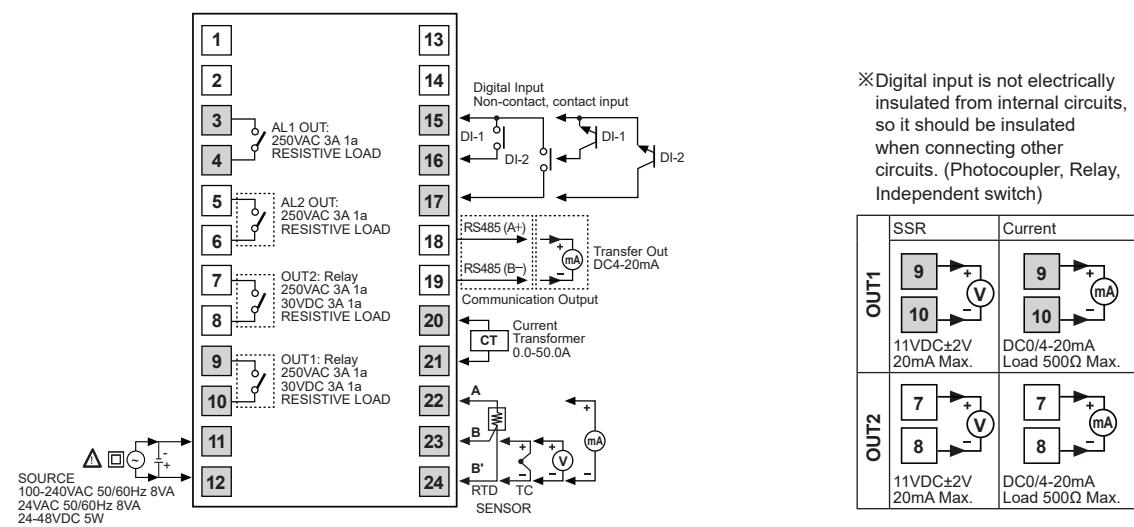


※ Digital input is not electrically insulated from internal circuits, so it should be insulated when connecting other circuits. (Photocoupler, Relay, Independent switch)

## Dimensions

### ● TK4N Series

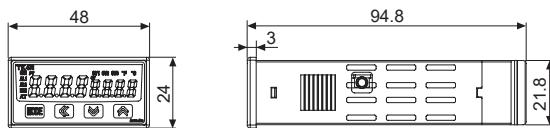


### ● TK4S Series

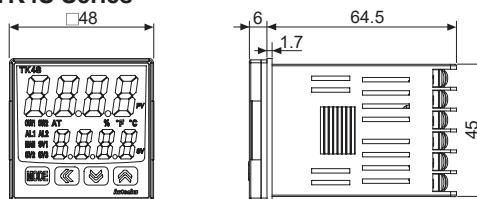


(unit: mm)

### ● TK4SP Series

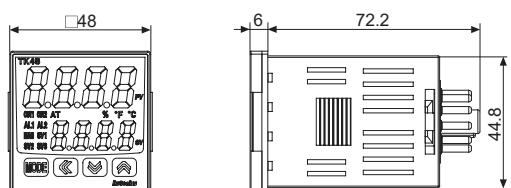

### ● TK4M Series

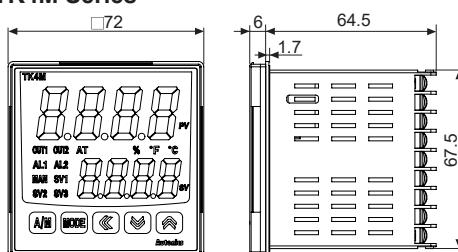


SENSORS	
CONTROLLERS	
MOTION DEVICES	
SOFTWARE	
(J) Temperature Controllers	
(K) SSRs	
(L) Power Controllers	
(M) Counters	
(N) Timers	
(O) Digital Panel Meters	
(P) Indicators	
(Q) Converters	
(R) Digital Display Units	
(S) Sensor Controllers	
(T) Switching Mode Power Supplies	
(U) Recorders	
(V) HMIs	
(W) Panel PC	
(X) Field Network Devices	


# TK Series

## ■ Dimensions

### ● TK4W Series

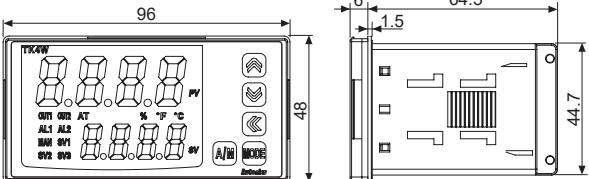


### ● TK4H Series

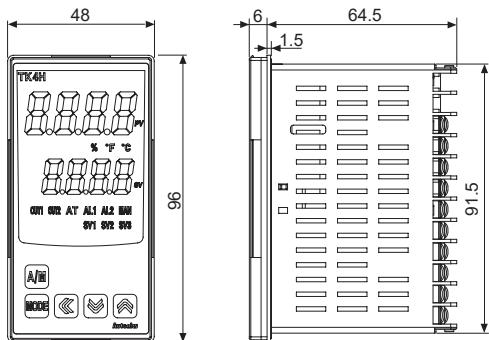


(unit: mm)

### ● TK4L Series

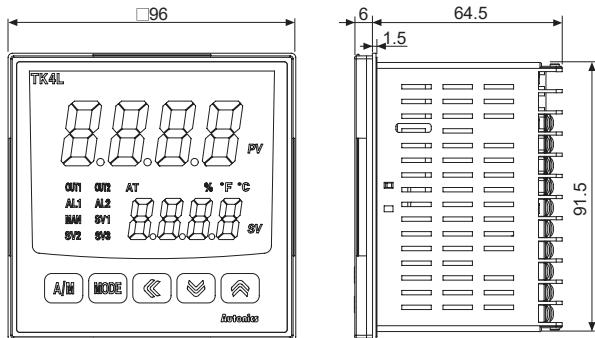

### ● Panel cut-out

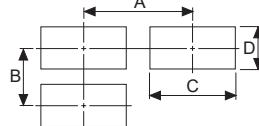


(unit: mm)


Model	Size	A	B	C	D
TK4N		Min. 55	Min. 37	$45^{+0.6}_0$	$22.2^{+0.3}_0$
TK4S		Min. 65	Min. 65	$45^{+0.6}_0$	$45^{+0.6}_0$
TK4SP		Min. 65	Min. 65	$45^{+0.6}_0$	$45^{+0.6}_0$
TK4M		Min. 90	Min. 90	$68^{+0.7}_0$	$68^{+0.6}_0$
TK4H		Min. 65	Min. 115	$45^{+0.6}_0$	$92^{+0.8}_0$
TK4W		Min. 115	Min. 65	$92^{+0.8}_0$	$45^{+0.6}_0$
TK4L		Min. 115	Min. 115	$92^{+0.8}_0$	$92^{+0.8}_0$

### ● Bracket


#### ● TK4N Series

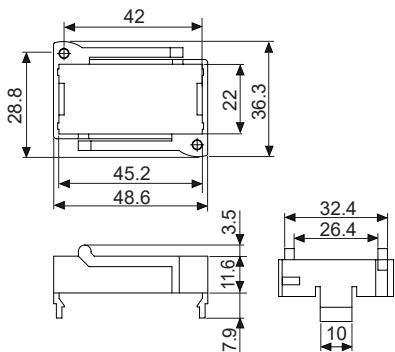

#### ● TK4S, TK4SP Series

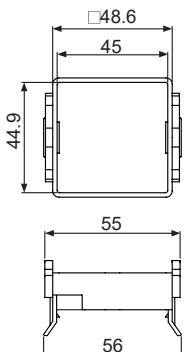


#### ● TK4M/W/H/L Series

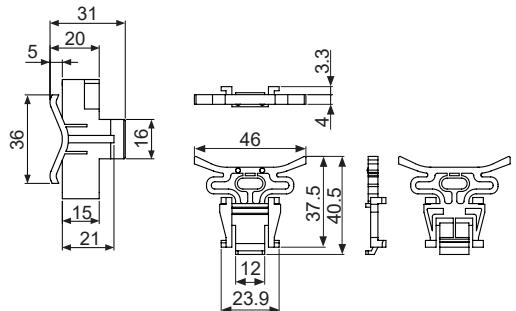


### ● Terminal cover (sold separately)

#### ● TK4N Cover (48×24mm)

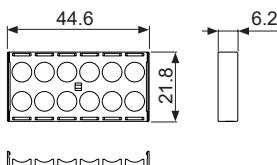


※TK4N COVER is accessory.

#### ● RSA Cover (48×48mm)

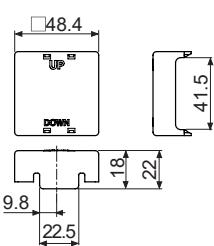

#### ● RMA Cover (72×72mm)

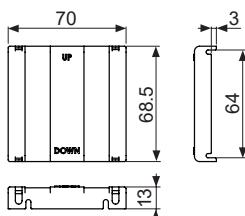


# High Performance, General-Purpose, PID Control


## Dimensions

### ● Terminal cover (sold separately)

- RHA Cover (48×96mm, 96×48mm)

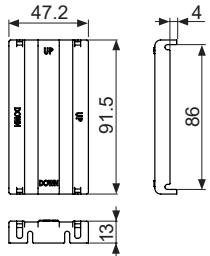


- RLA Cover (96×96mm)

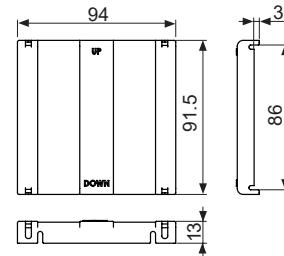

(unit: mm)


## Product Mounting

### ● TK4N (48×24mm) Series

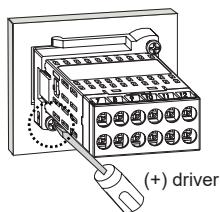


※ Insert the unit into a panel, fasten the bolt with a (+) driver.

### ● TK4S/SP (48×48mm) Series

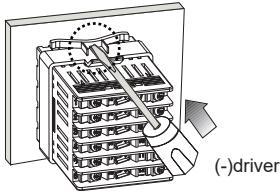

※ Insert the unit into a panel, fasten the bracket by pushing with tools with a (-) driver.


### ● Other Series

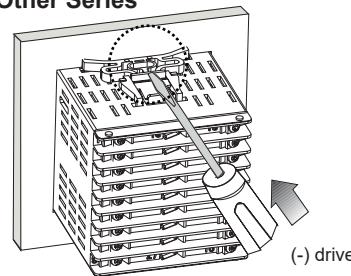

## Unit Description




TK4N Series

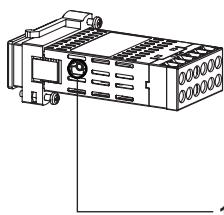


※ The input selection switch (TC, RTD/mV, V, mA) switch disappears.  
Select input type [I - n - t] in parameter 3 group.

Other Series

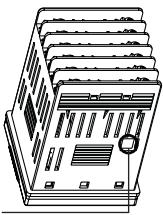

The previous model

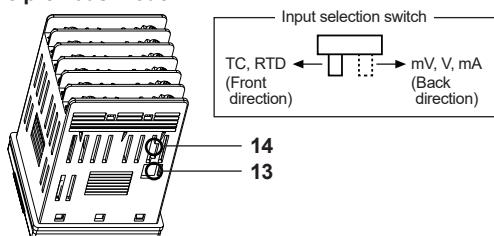

#### 1. Measured value (PV) display part:

- RUN mode: It displays currently measured value (PV).
- Setting mode: It displays the parameter.

#### 2. Set value (SV) display part:

- RUN mode: It displays the set value (SV).
- Setting mode: It displays the set value of the parameter.

#### 3. Unit ("C/F/%") indicator:

- It displays the unit set at display unit [U/n\_e] in parameter 3 group. (In case of TK4N, % is not supported)

#### 4. Manual control indicator:

- It turns ON during manual controlling.

#### 5. Multi SV indicator:

- One of SV1 to 3 indicators will be ON in case of selecting multi SV function.

#### 6. Auto tuning indicator:

- It flashes by 1 sec when executing auto tuning.

#### 7. Alarm output (AL 1, AL 2) indicator:

- It turns ON when the alarm output is ON.

#### 8. Control output (OUT 1, OUT 2) indicator:

- It turns ON when the control output is ON.

※ During cycle/phase controlling in SSRP function model (TK4□□4S□) when MV is over 5.0%, it turns ON.

※ To use current output, when MV is 0.0% in manual control, it turns OFF. Otherwise, it always turns ON. When MV is over 3.0% in auto control, it turns ON and when MV is below 2.0%, it turns OFF.

#### 9. [A/M] key:

- It is used when switching auto control to manual control.

※ TK4N/S/SP do not have [A/M] key. [MODE] key operates switching simultaneously.

#### 10. [MODE] key:

- It is used when entering parameter setting group, returning to RUN mode, moving parameter, saving the set value.

#### 11. [↖], [↙], [↖ ↘] key:

- It is used when entering the set value changing mode and moving or changing up/down digit.

#### 12. Digital input key:

- When pressing [↖] + [↖ ↘] keys for 3 sec at the same time, it operates the function (RUN/STOP, alarm clear, auto tuning) set at digital input key [d1 - b1] in parameter 5 group.

#### 13. PC loader port:

- It is the PC loader port for serial communication to set parameter and monitoring by DAQMaster installed in PC. Use this for connecting SCM-US (USB to Serial converter, sold separately).

#### 14. Input selection switch:

- Used when switching sensor (TC, RTD) input ↔ analog input (mV, V, mA). (only the previous model)

SENSORS
CONTROLLERS
MOTION DEVICES
SOFTWARE
(J) Temperature Controllers
(K) SSRs
(L) Power Controllers
(M) Counters
(N) Timers
(O) Digital Panel Meters
(P) Indicators
(Q) Converters
(R) Digital Display Units
(S) Sensor Controllers
(T) Switching Mode Power Supplies
(U) Recorders
(V) HMI
(W) Panel PC
(X) Field Network Devices

# TK Series

## ■ Sold Separately



### ◎ Communication converter

- SCM-WF48  
(Wi-Fi to RS485-USB wireless communication converter)  
CE K
- SCM-US48I  
(USB to RS485 converter)  
CE K
- SCM-38I  
(RS232C to RS485 converter)  
CE K
- SCM-US  
(USB to Serial converter)  
CE K





### ◎ Current transformer (CT)

- CSTC-E80LN

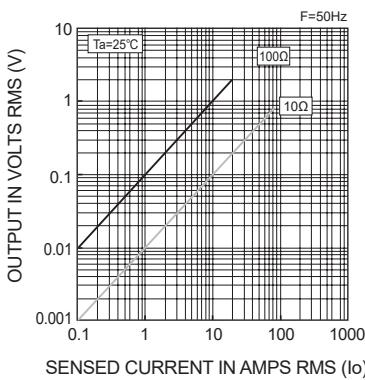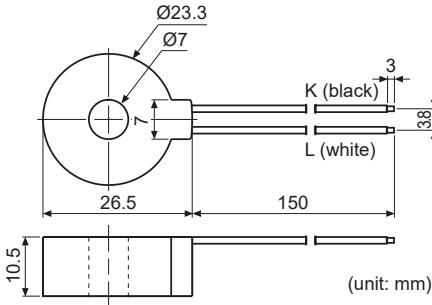



- Max. load current: 80A (50/60Hz)  
※ Max. load current for TK4 Series is 50A.
- Current ratio: 1/1000
- Wire wounded resistance:  $31\Omega \pm 10\%$

- CSTC-E200LN

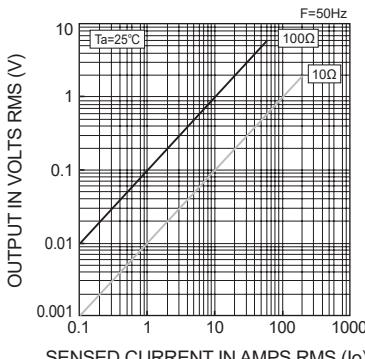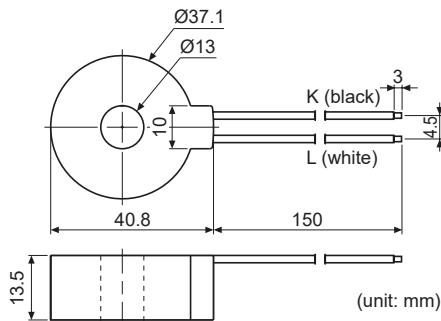

- Max. load current: 200A (50/60Hz)  
※ Max. load current for TK4 Series is 50A.
- Current ratio: 1/1000
- Wire wounded resistance:  $20\Omega \pm 10\%$

- CSTS-E80PP

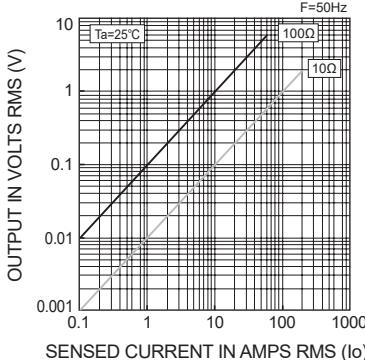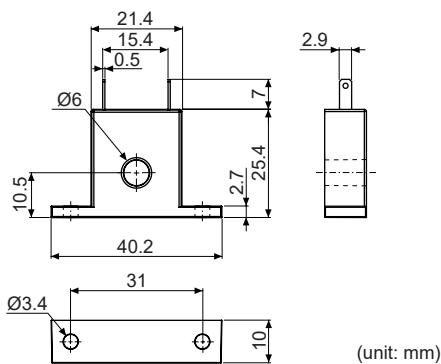

- Max. load current: 80A (50/60Hz)  
※ Max. load current for TK4 Series is 50A.
- Current ratio: 1/1000
- Wire wounded resistance  $31\Omega \pm 10\%$

※Do not supply primary current in case that CT output is open. High voltage will be generated in CT output.

※The current for above CTs is 50A same but inner hole sizes are different. Please use this for your environment.

# High Performance, General-Purpose, PID Control

## Sold Separately

### Display units (DS/DA-T Series)

- DS/DA-T Series  
(RS485 communication input type display unit) C €



DS16-□T



DS22/DA22-□T



DS40/DA40-□T



DS60/DA60-□T


※ Connect RS485 communication input type display unit (DS/DA-T Series) and RS485 communication output model of TK Series, the display unit displays present value of the device without PC/PLC.

## Input Type and Range

Input type		Decimal point	Display	Input range (°C)	Input range (°F)
Thermocouple	K(CA)	1	E CR.H	-200 to 1350	-328 to 2463
	0.1	E CR.L	-199.9 to 999.9	-199.9 to 999.9	
	J(IC)	1	J1 EH	-200 to 800	-328 to 1472
	0.1	J1 EL	-199.9 to 800.0	-199.9 to 999.9	
	E(CR)	1	E CR.H	-200 to 800	-328 to 1472
	0.1	E CR.L	-199.9 to 800.0	-199.9 to 999.9	
	T(CC)	1	E CC.H	-200 to 400	-328 to 752
	0.1	E CC.L	-199.9 to 400.0	-199.9 to 752.0	
	B(PR)	1	b Pr	0 to 1800	32 to 3272
	R(PR)	1	r Pr	0 to 1750	32 to 3182
	S(PR)	1	S Pr	0 to 1750	32 to 3182
	N(NN)	1	n nn	-200 to 1300	-328 to 2372
	C(TT) <sup>※1</sup>	1	C ET	0 to 2300	32 to 4172
	G(TT) <sup>※2</sup>	1	G ET	0 to 2300	32 to 4172
	L(IC)	1	L1 EH	-200 to 900	-328 to 1652
	0.1	L1 EL	-199.9 to 900.0	-199.9 to 999.9	
	U(CC)	1	U CC.H	-200 to 400	-328 to 752
	0.1	U CC.L	-199.9 to 400.0	-199.9 to 752.0	
	Platinel II	1	PL II	0 to 1390	32 to 2534
RTD	Cu 50Ω	0.1	CU 5	-199.9 to 200.0	-199.9 to 392.0
	Cu 100Ω	0.1	CU 10	-199.9 to 200.0	-199.9 to 392.0
	JPt 100Ω	1	JPT H	-200 to 650	-328 to 1202
	DPt 50Ω	0.1	dPT 5	-199.9 to 600.0	-199.9 to 999.9
	DPt 100Ω	1	dPT H	-200 to 650	-328 to 1202
	Nickel 120Ω	0.1	dPT L	-199.9 to 650.0	-199.9 to 999.9
		1	n 12	-80 to 200	-112 to 392
Analog	Voltage	0-10V	A u 1	-1999 to 9999 (Display point will be changed according to decimal point position)	
		0-5V	A u 2		
		1-5V	A u 3		
		0-100mV	A n u 1		
		0-20mA	A n R 1		
	Current	4-20mA	A n R 2		

※1: C (TT): Same as existing W5 (TT) type sensor


※2: G (TT): Same as existing W (TT) type sensor

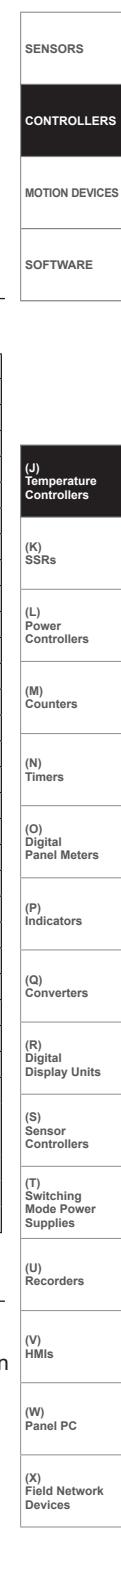

## Front Panel Display When Power Is On

When power is supplied, display will flash for 1 sec. Afterwards, model name and input sensor type will flash twice and then enter into RUN mode.

### 1. Whole display part

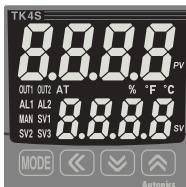

### 2. Model type display



### 3. Input sensor type display




### 4. Run mode




# TK Series


## Parameter Group

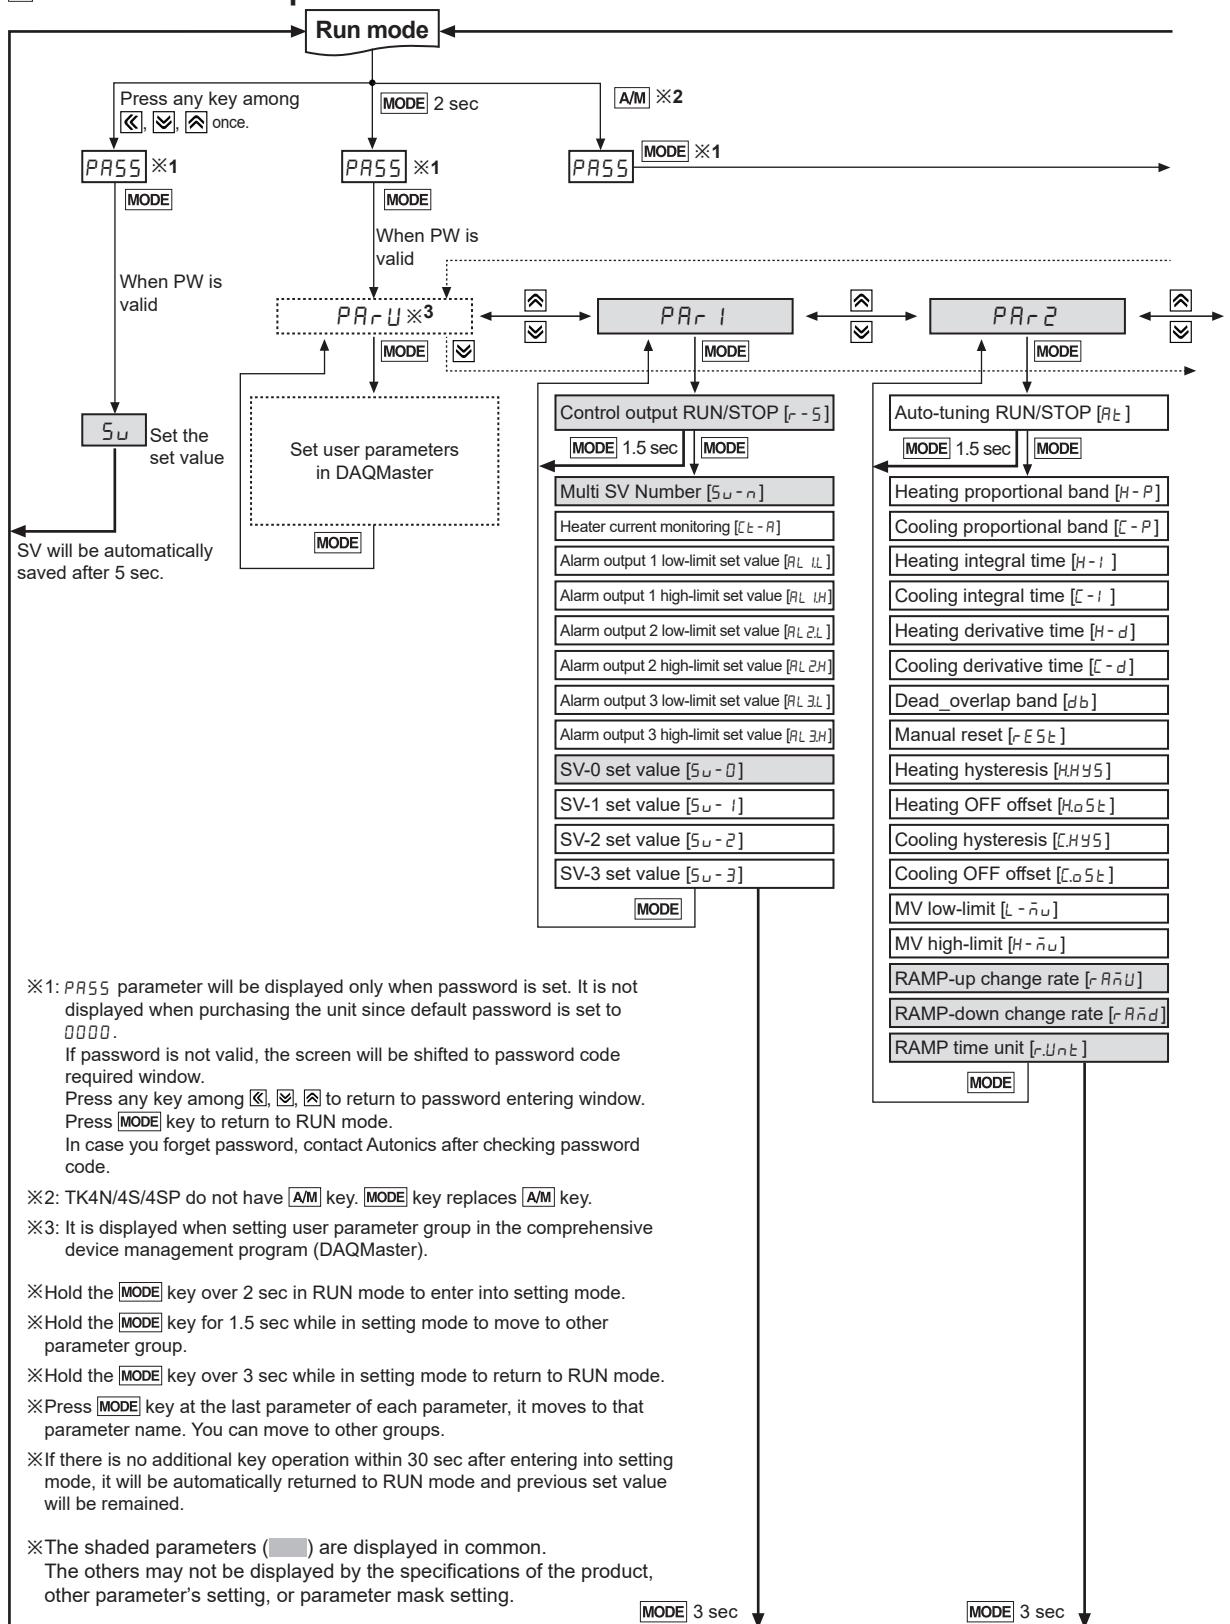


# High Performance, General-Purpose, PID Control

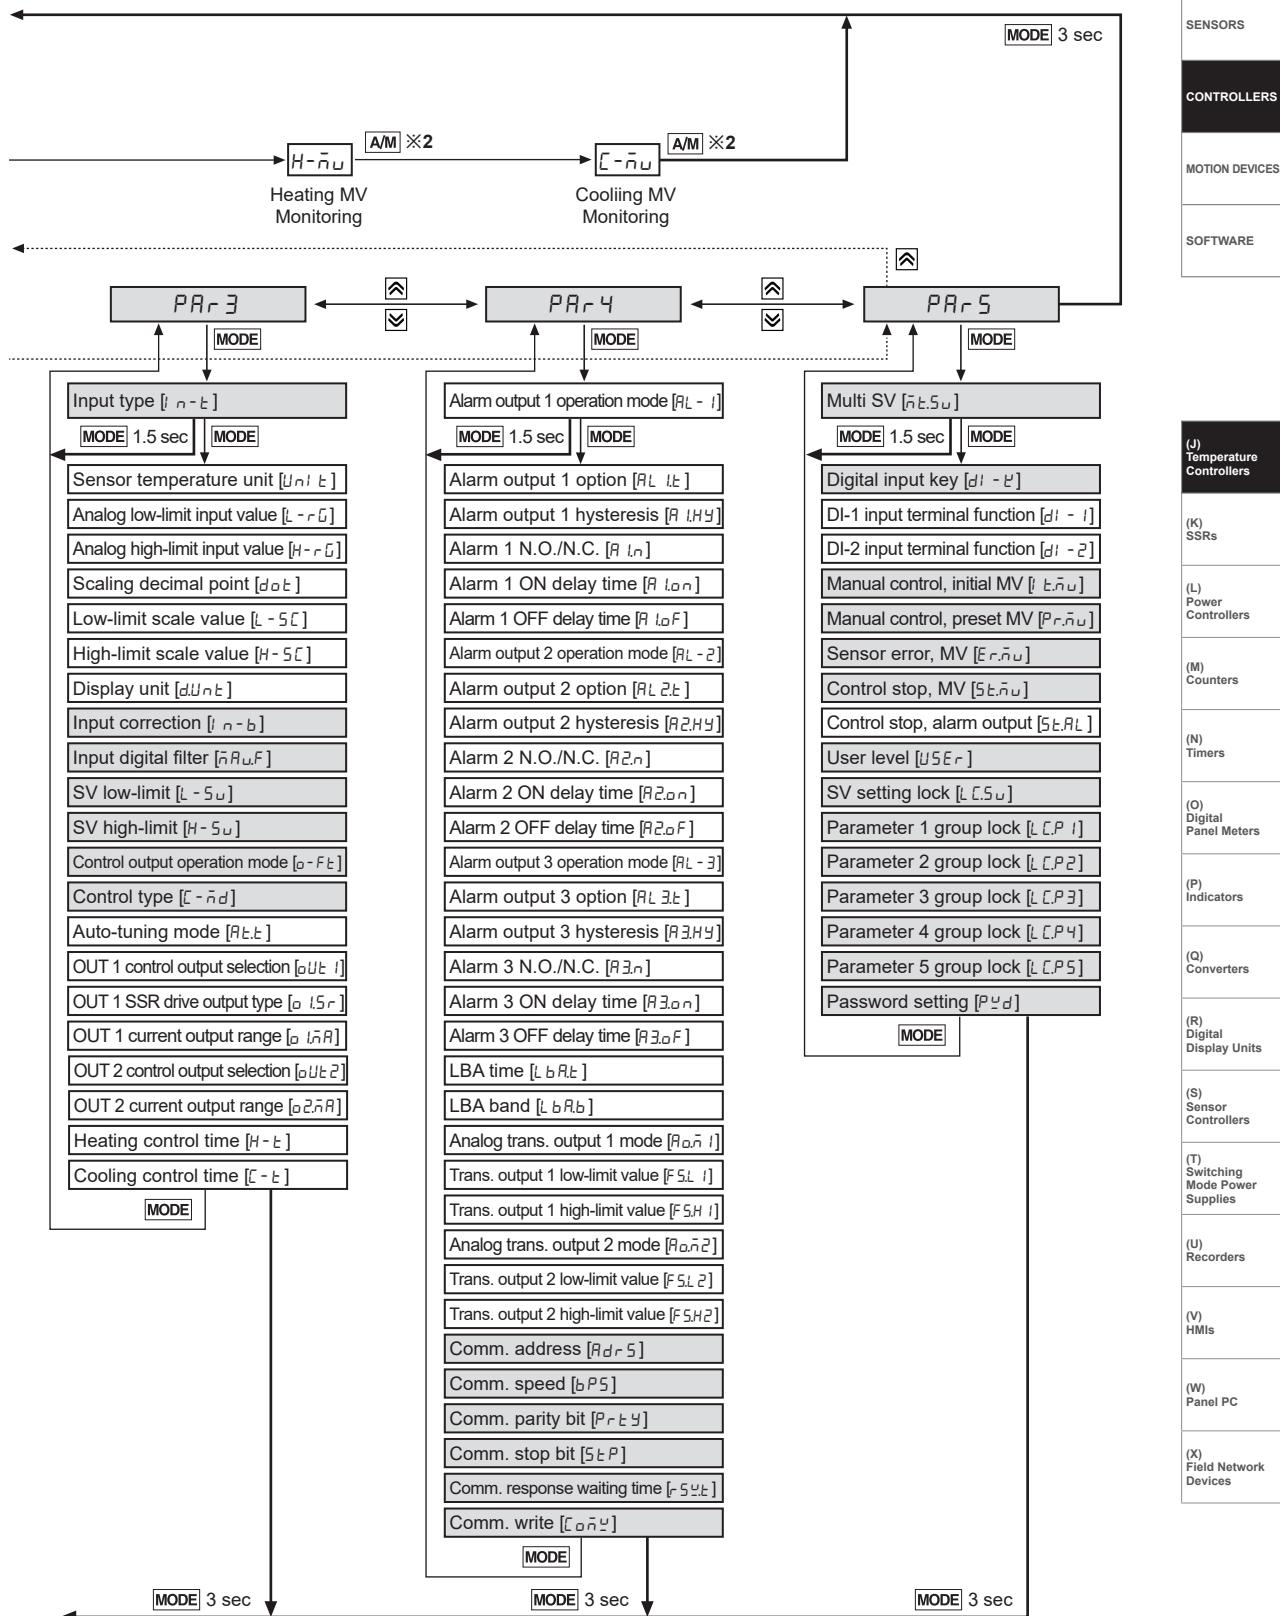

## Parameter 1 Group

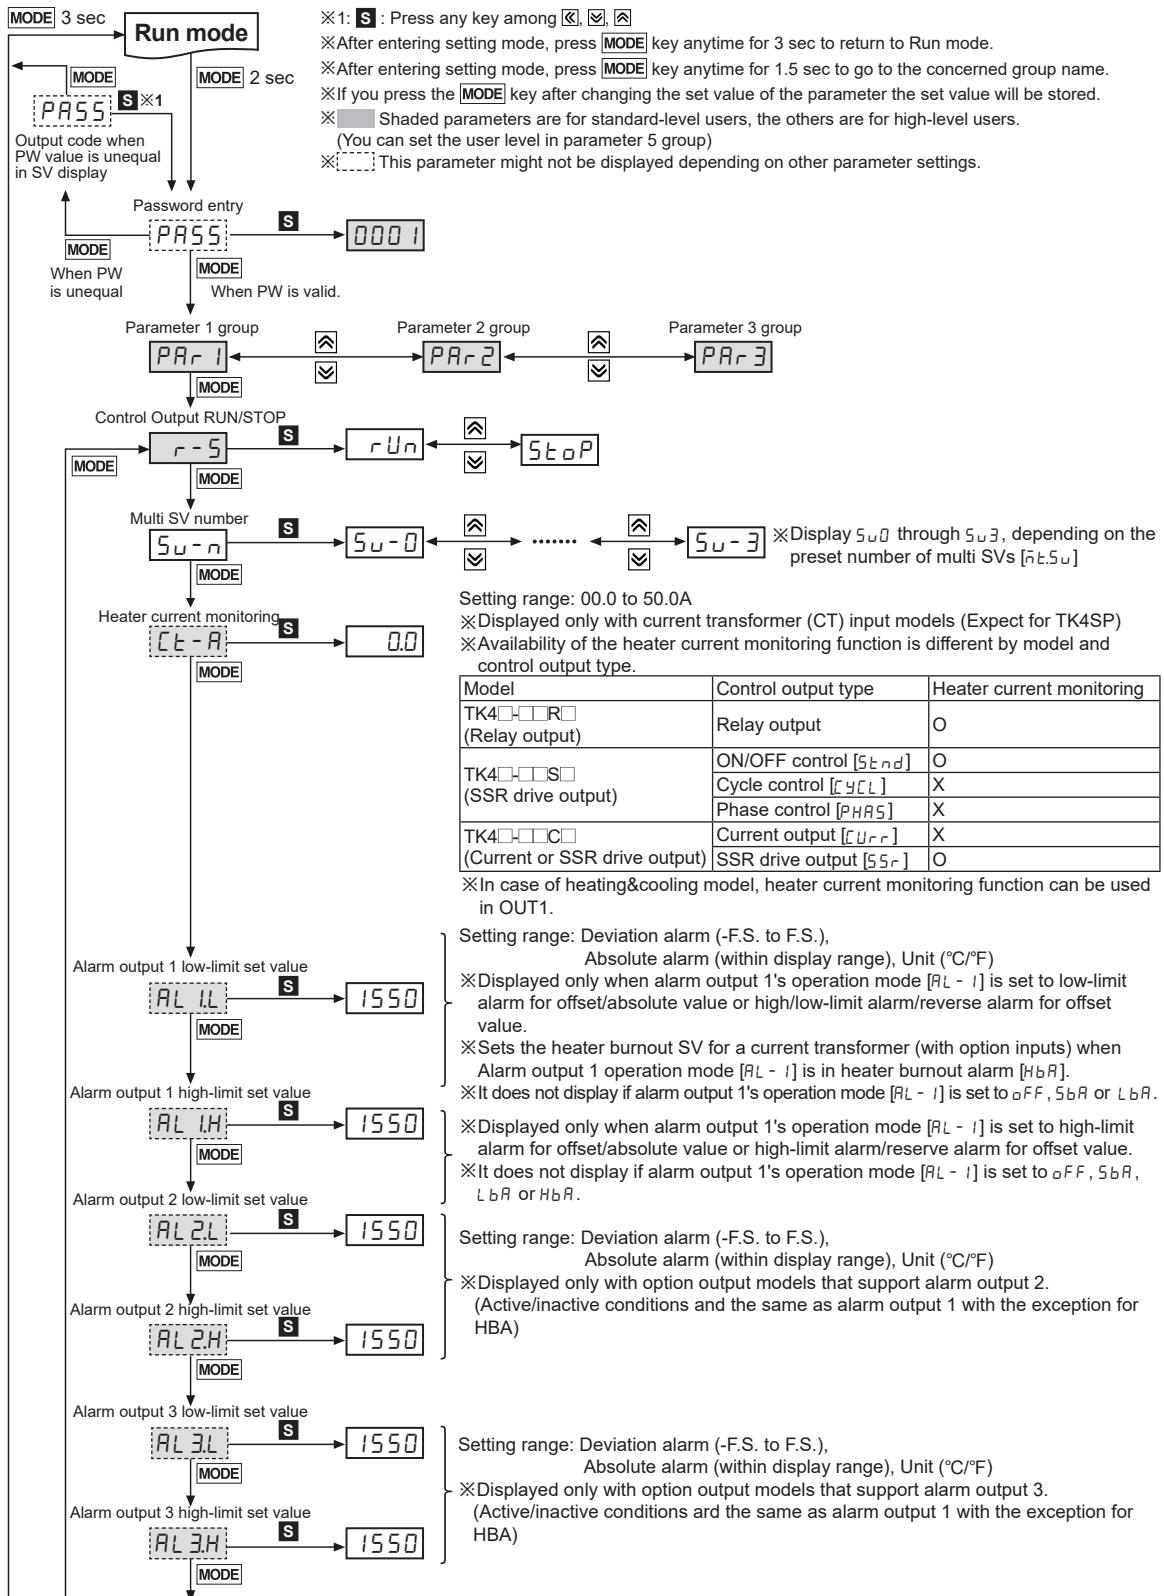


# High Performance, General-Purpose, PID Control

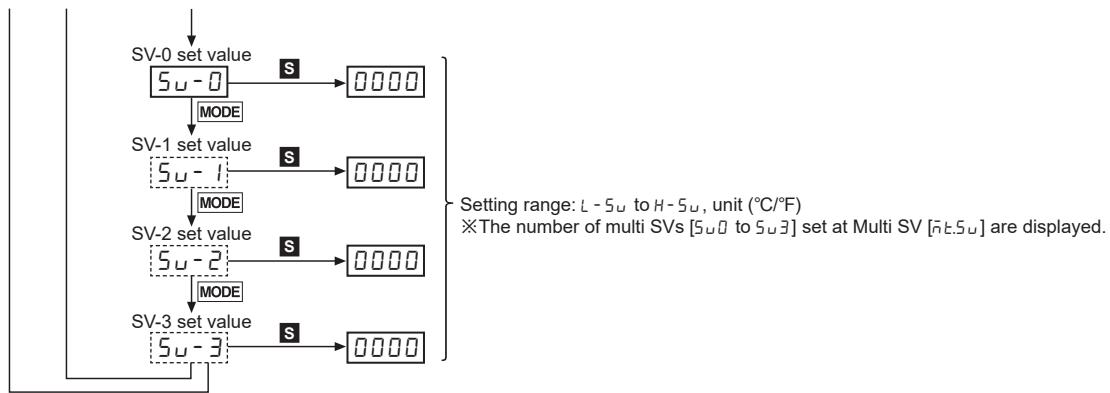


SENSORS  
CONTROLLERS  
MOTION DEVICES  
SOFTWARE

## Parameter 2 Group


(J) Temperature Controllers  
(K) SSRs  
(L) Power Controllers  
(M) Counters  
(N) Timers  
(O) Digital Panel Meters  
(P) Indicators  
(Q) Converters  
(R) Digital Display Units  
(S) Sensor Controllers  
(T) Switching Mode Power Supplies  
(U) Recorders  
(V) HMIs  
(W) Panel PC  
(X) Field Network Devices

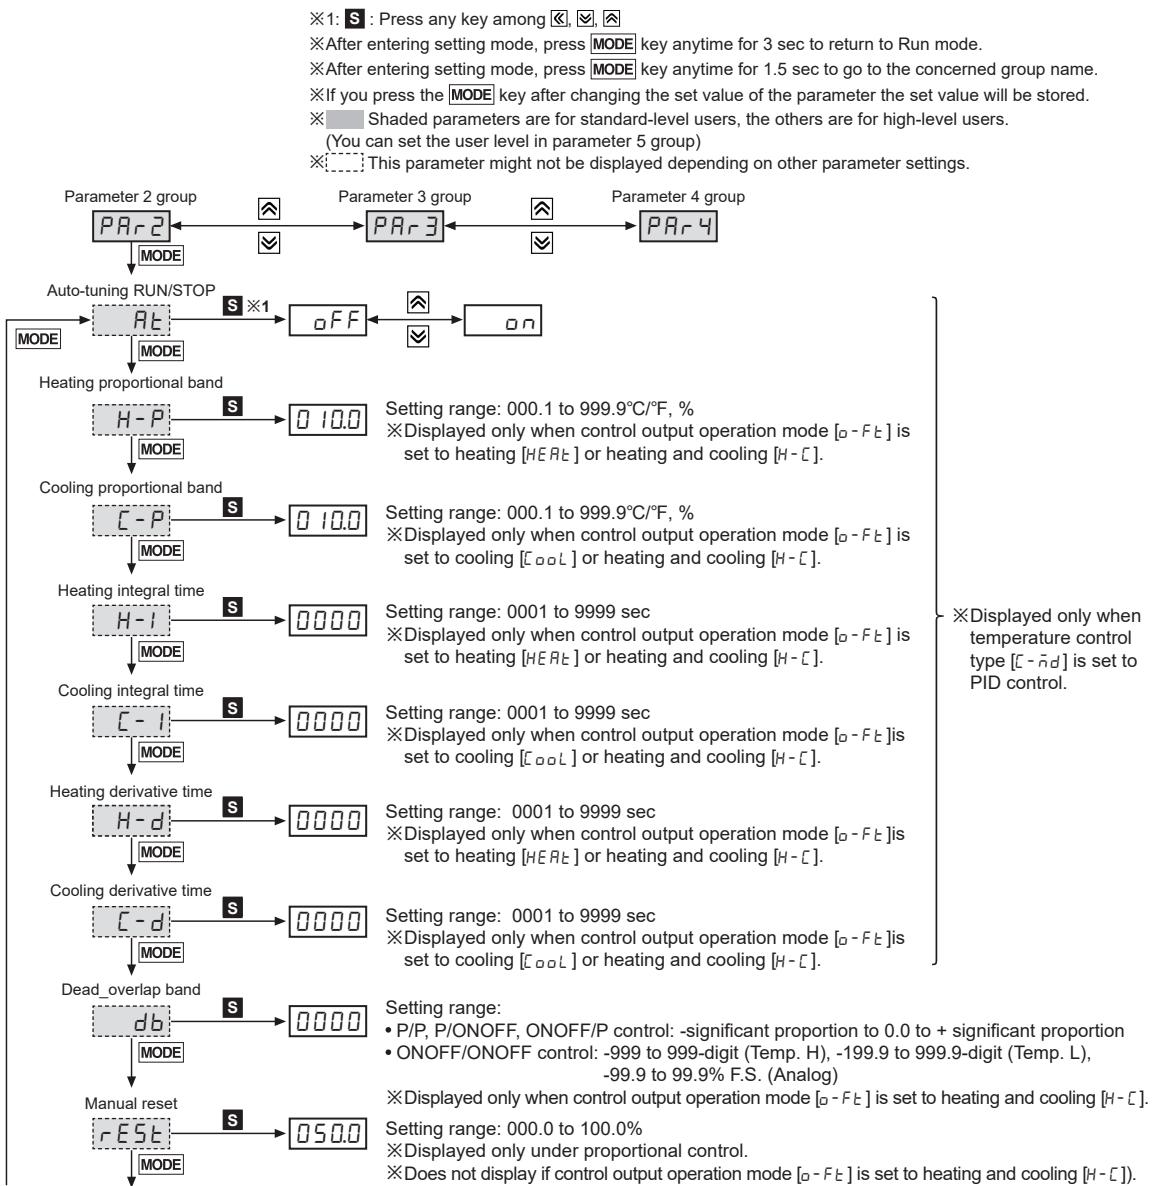

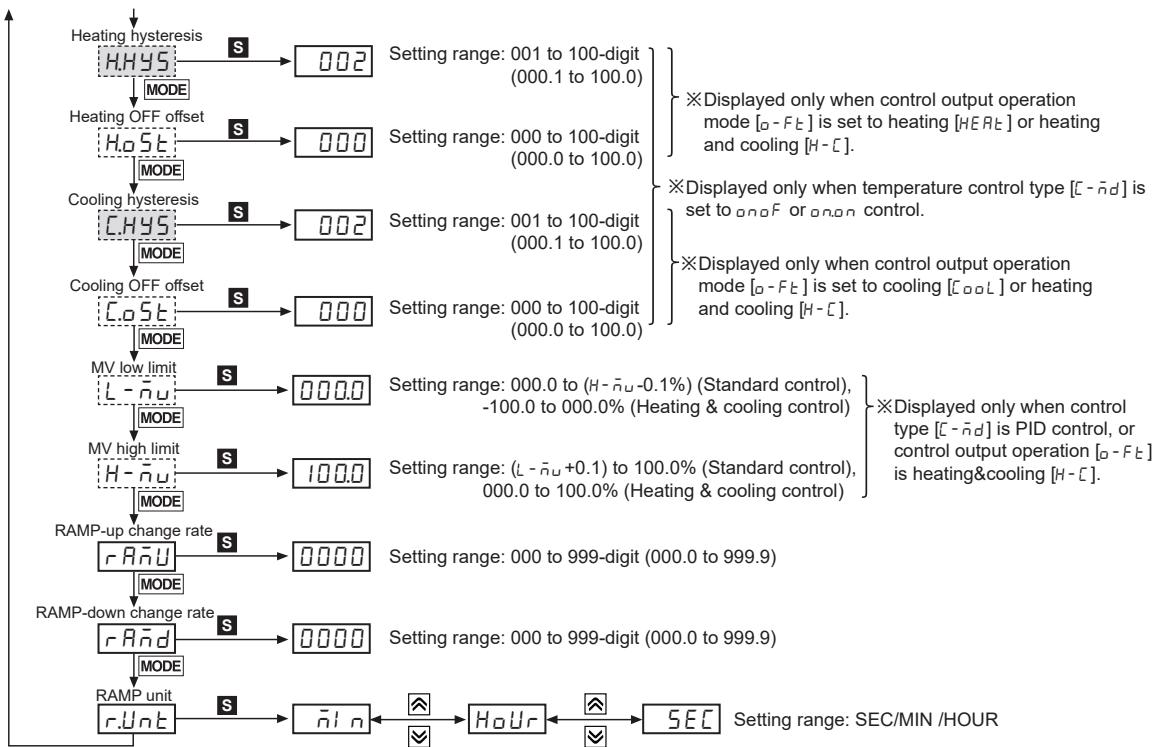


## Parameter 3 Group

- ※1: **S** : Press any key among **↖ ↘ ↗ ↙**.
- ※After entering setting mode, press **MODE** key anytime for 3 sec to return to Run mode.
- ※After entering setting mode, press **MODE** key anytime for 1.5 sec to go to the concerned group name.
- ※If you press the **MODE** key after changing the setting value of the parameter the setting value will be stored.
- ※ Shaded parameters are for standard-level users, the others are for high-level users.  
(You can set the user level in parameter 5 group)
- ※ This parameter might not be displayed depending on other parameter settings.

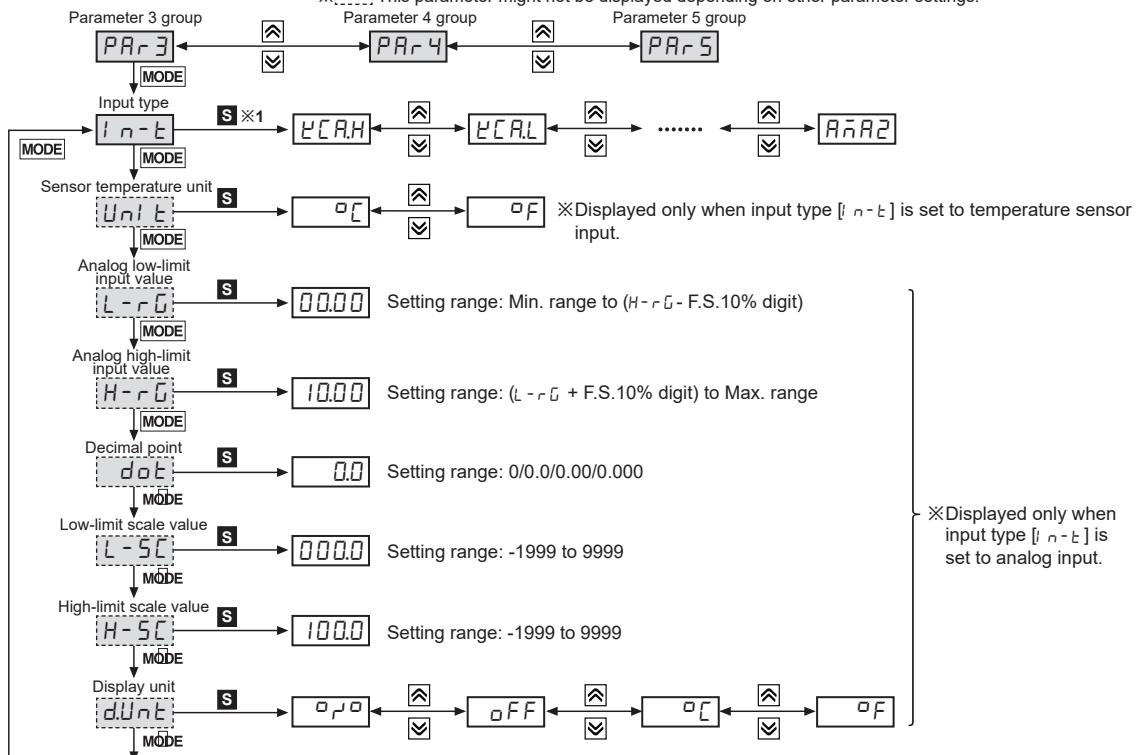

# High Performance, General-Purpose, PID Control

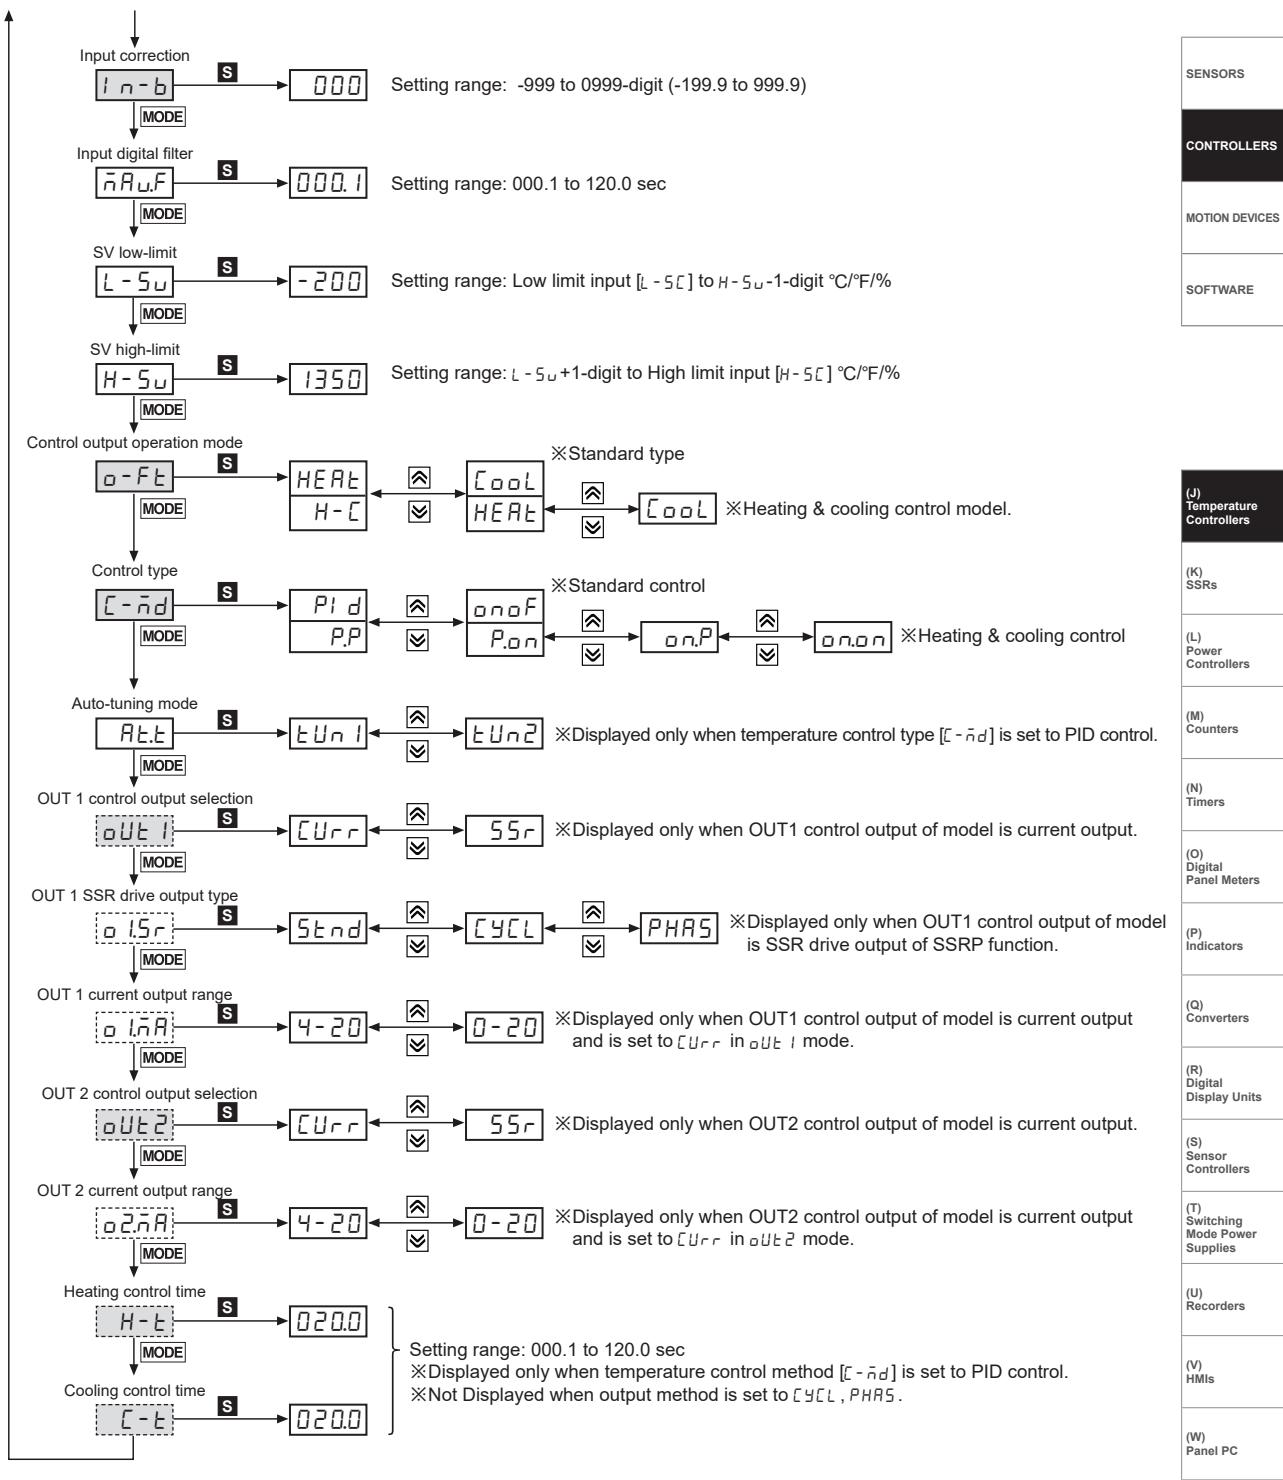


※ OUT1, OUT2 output:


- In case that OUT1, OUT2 output is relay output type,  $aUt 1$ ,  $a15r$ ,  $a15A$ ,  $aUt 2$ ,  $a25r$ ,  $a25A$  parameter are not displayed.
- In case that OUT1, OUT2 output is current + SSR drive output type, when OUT1, OUT2 output is set to  $55r$ .
  - Output method of  $a15r$ ,  $a25r$  is held in  $5End$  and parameter is not displayed.
- In case that OUT1, output is SSR drive output model of SSRP function and OUT2 output is current + SSR drive output
  - $aUt 1$ ,  $a15A$  are not displayed.
  - $a15r$  can set to  $5End$ ,  $CYCL$ ,  $PHAS$
  - When  $a25r$  is set to  $55r$  it is held in  $5End$  and parameter is not displayed.

## Parameter 4 Group


- ※1: S : Press any key among [ ], [ ], [ ]
- ※After entering setting mode, press [MODE] key anytime for 3 sec to return to Run mode.
- ※After entering setting mode, press [MODE] key anytime for 1.5 sec to go to the concerned group name.
- ※If you press the [MODE] key after changing the set value of the parameter the set value will be stored.
- ※ Shaded parameters are for standard-level users, the others are for high-level users.  
(You can set the user level in parameter 5 group)
- ※ This parameter might not be displayed depending on other parameter settings.

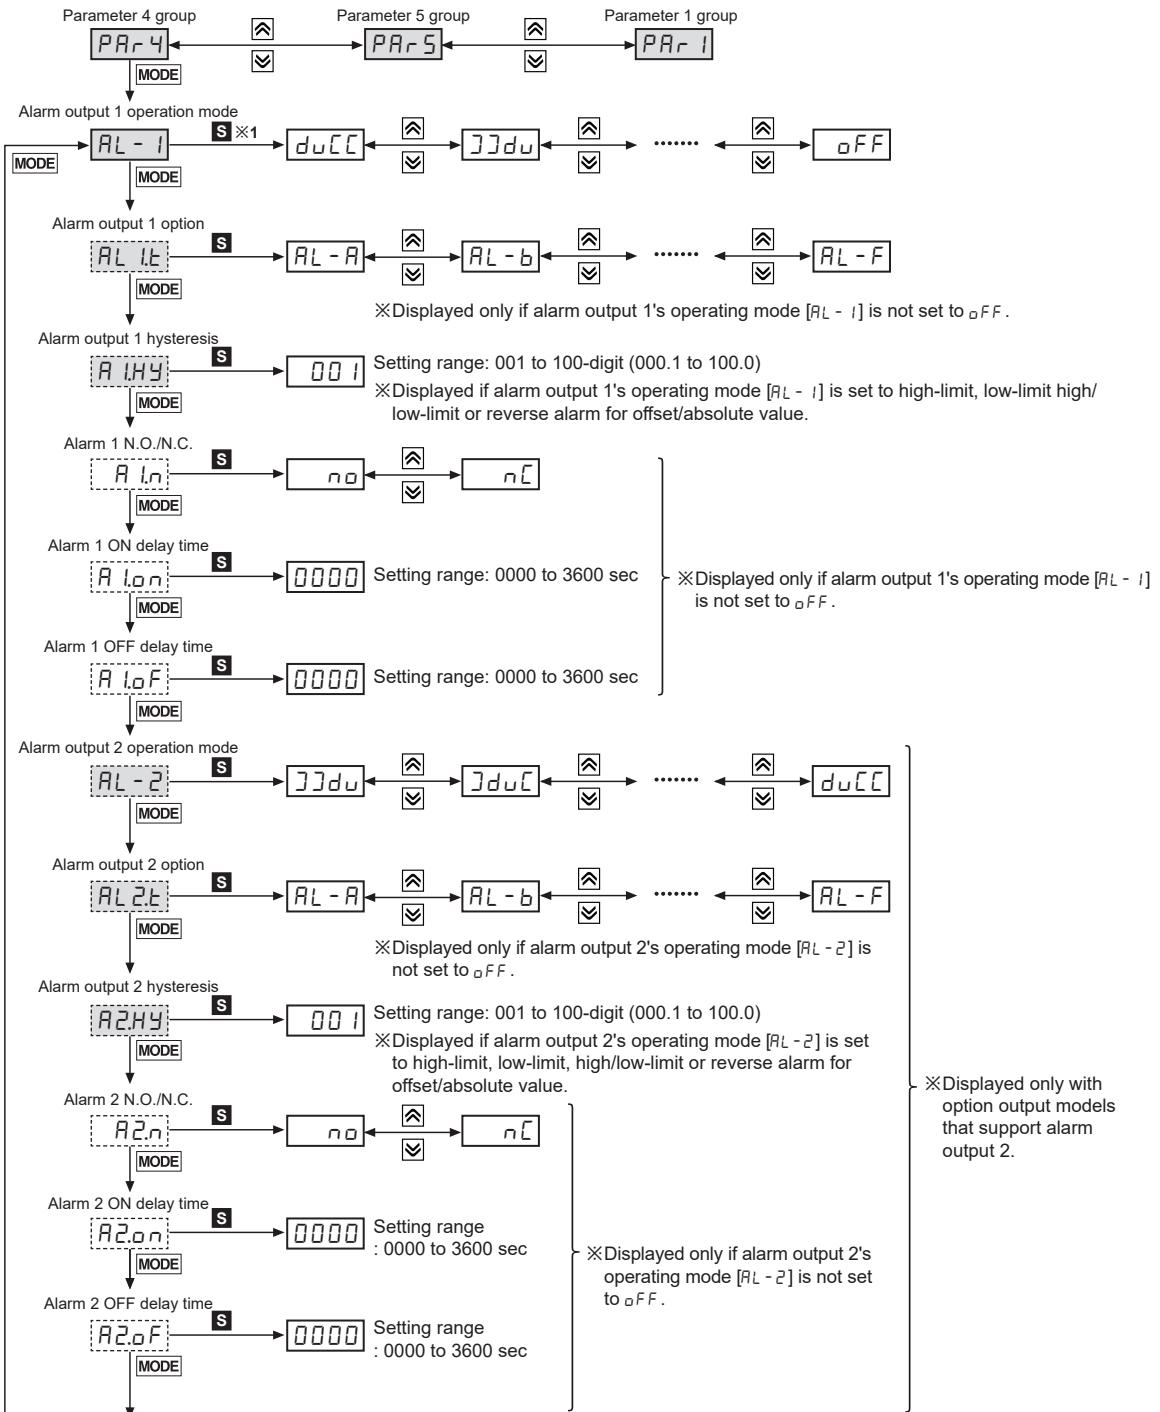

# High Performance, General-Purpose, PID Control

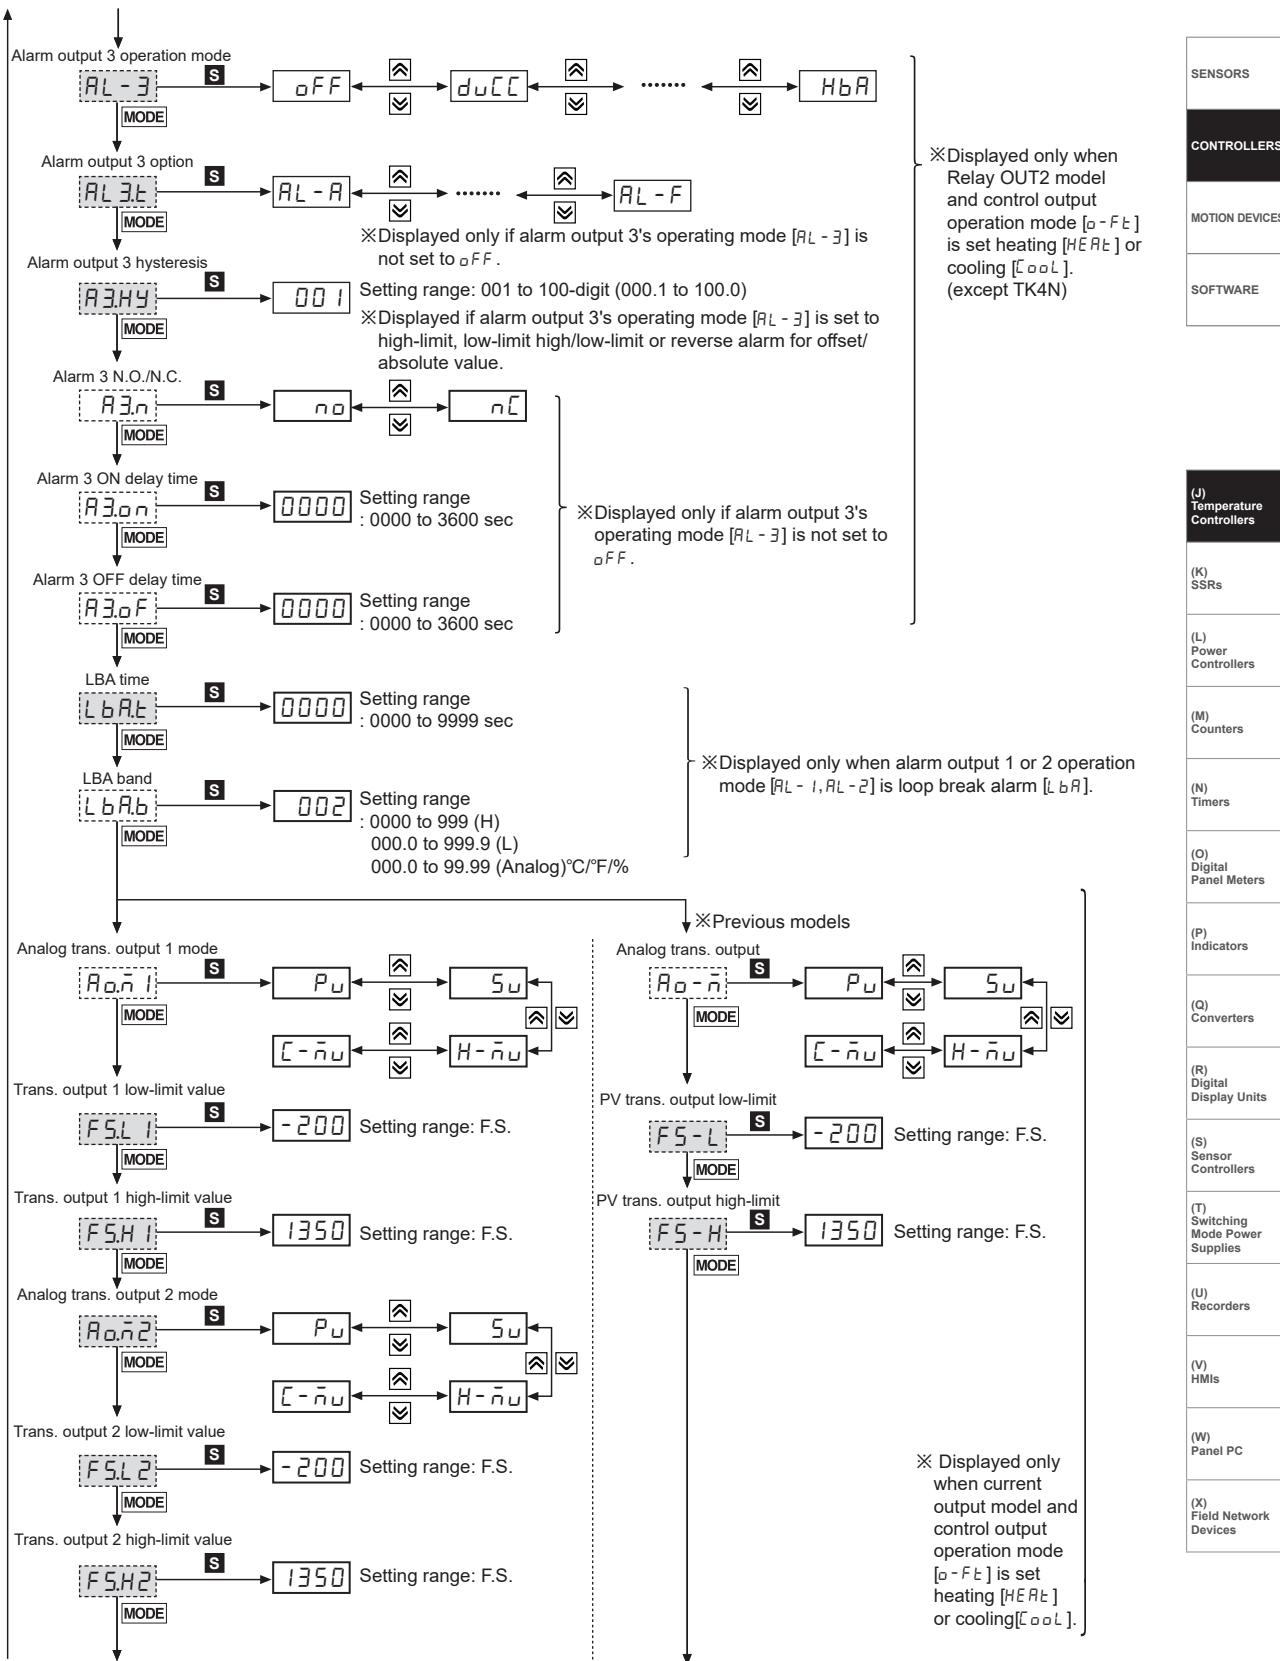


# TK Series

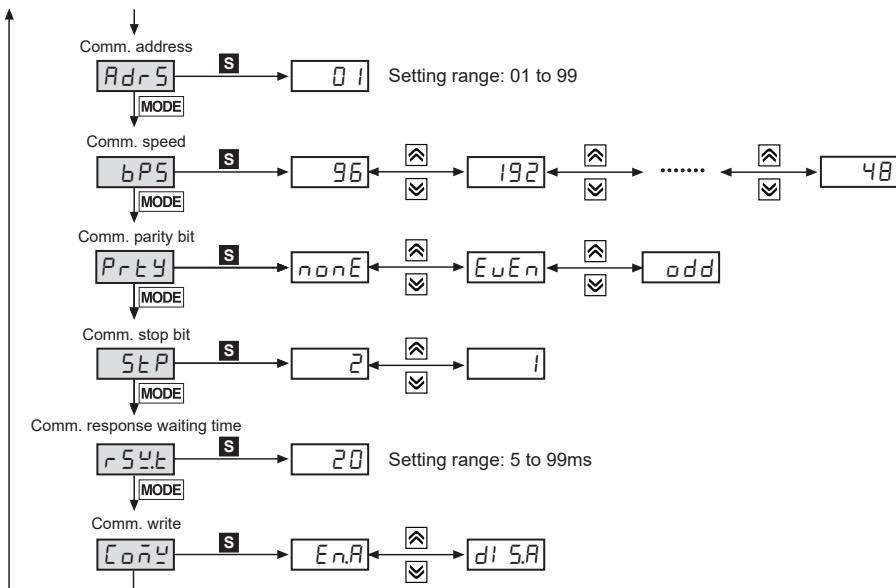


## Parameter 5 Group

- ※ 1: S : Press any key among  $\triangleleft$ ,  $\triangleright$ ,  $\triangleup$ .
- ※ After entering setting mode, press MODE key anytime for 3 sec to return to Run mode.
- ※ After entering setting mode, press MODE key anytime for 1.5 sec to go to the concerned group name.
- ※ If you press the MODE key after changing the setting value of the parameter the setting value will be stored.
- ※ Shaded parameters are for standard-level users, the others are for high-level users.
- ※ You can set the user level in parameter 5 group)
- ※ This parameter might not be displayed depending on other parameter settings.

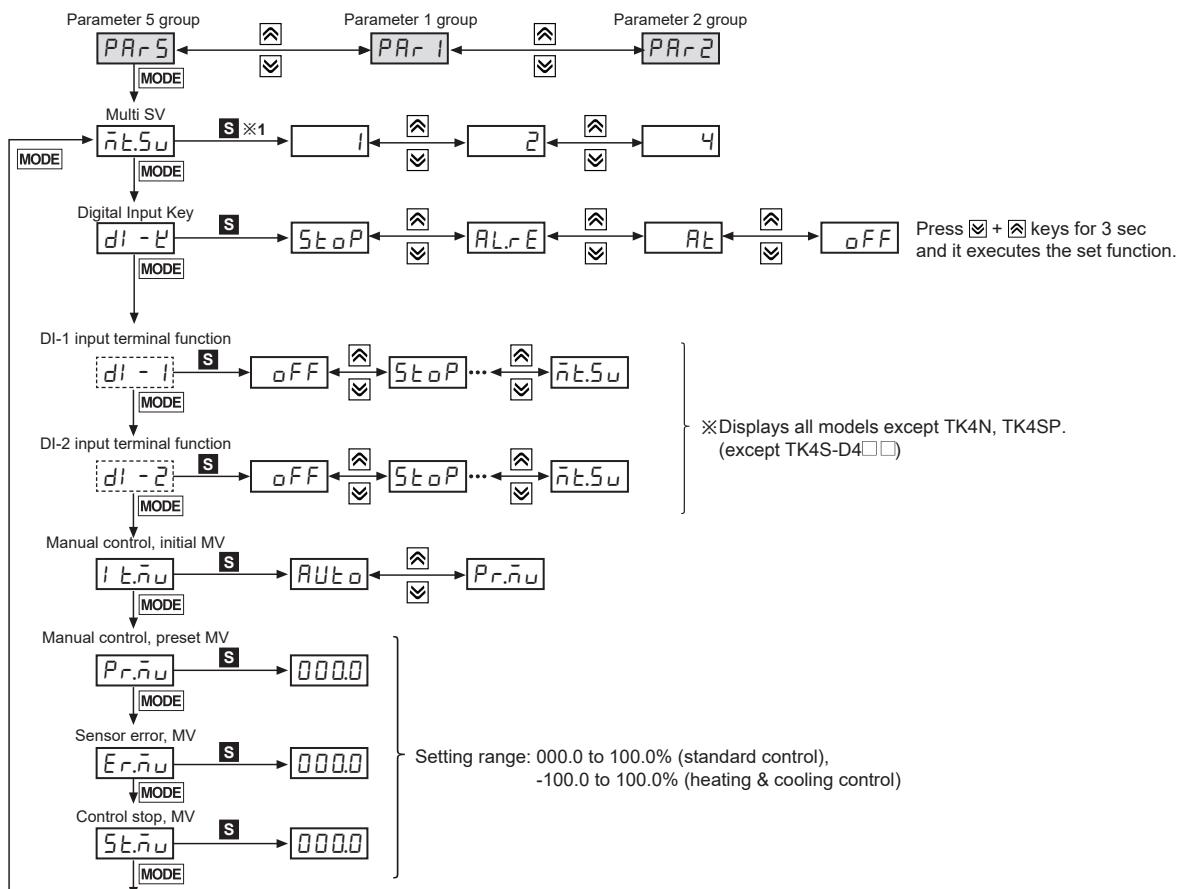

# High Performance, General-Purpose, PID Control

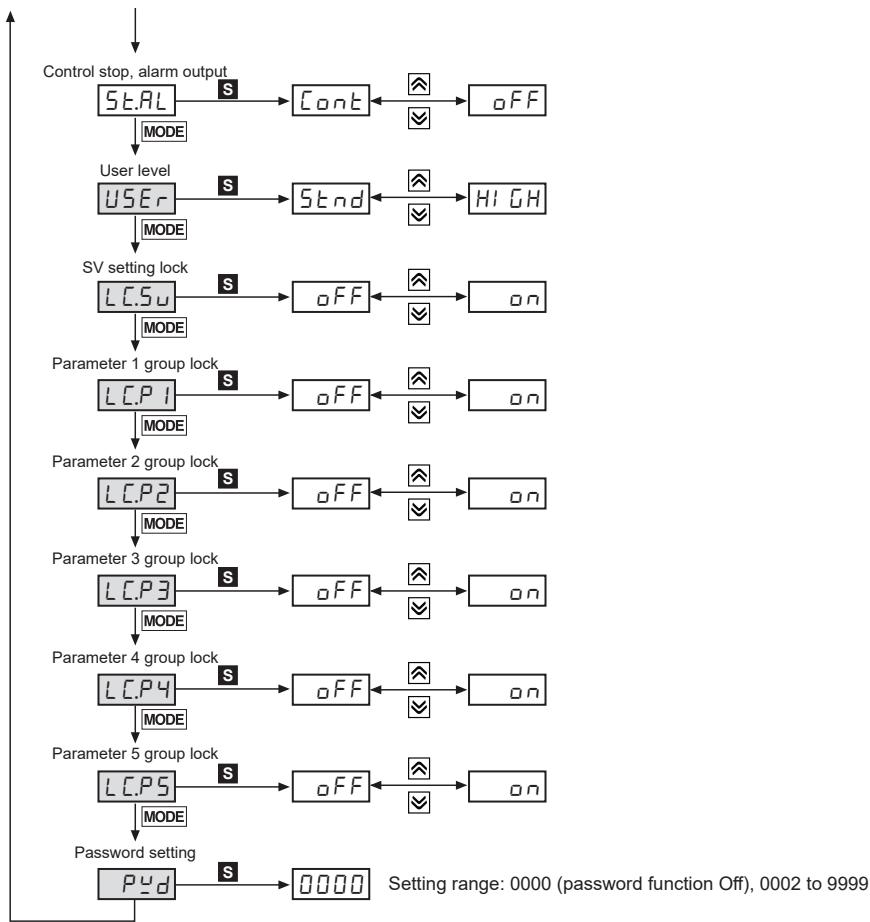

SENSORS
CONTROLLERS
MOTION DEVICES
SOFTWARE
(J) Temperature Controllers
(K) SSRs
(L) Power Controllers
(M) Counters
(N) Timers
(O) Digital Panel Meters
(P) Indicators
(Q) Converters
(R) Digital Display Units
(S) Sensor Controllers
(T) Switching Mode Power Supplies
(U) Recorders
(V) HMIs
(W) Panel PC
(X) Field Network Devices

## SV Setting


You can set the temperature to control with **↖, ↘, ↗** keys.

Setting range is within SV low-limit value [**L - 5u**] to SV high-limit value [**H - 5u**].

E.g.) In case of changing set temperature from 210°C to 250°C



Press any key among **↖, ↘, ↗** key in RUN mode, the right digit at SV display flashes and it enters to SV setting.

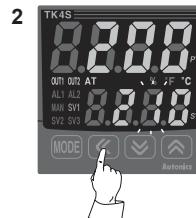

Press **↖** key to move the desired digit.  
( $10^0 \rightarrow 10^1 \rightarrow 10^2 \rightarrow 10^3 \rightarrow 10^0$ )



Press **↖** or **↗** key to move the desired number (1 → 5).



Press **MODE** key to save the value and it controls with this set value.  
(even though there is no key input for over 3 sec, it saves automatically.)

## Parameter Reset

Press **↖, ↘, ↗** to reset all parameters in memory to default value.

Set **Init parameter** to **YES** to reset all parameters.

In case password function is on, it is required to enter valid password to reset parameters.

Password is also reset.

# TK Series

## ■ Factory Default

### ● SV setting [Su]

Parameter	Factory default
Su	0

### ● Password input parameter

Parameter	Factory default
PR55	0001

### ● Parameter 1 group [PAr 1]

Parameter	Factory default						
r-S	rUn	RL1H	1550	RL3H	1550	Su-3	0000
Su-n	Su-0	RL2L	1550	Su-0	0000		
Ct-R	0.0	RL2H	1550	Su-1	0000		
RL1L	1550	RL3L	1550	Su-2	0000		

### ● Parameter 2 group [PAr 2]

Parameter	Factory default						
Rt	0FF	H-d	0000	HoSt	000	rRnU	000
H-P	0100	C-d	0000	CHYS	002	rRnd	000
C-P	0100	db	0000	CoSt	000	rUnt	n1 n
H-I	0000	rEST	0500	L-nu	4000		
C-I	0000	HHYS	002	H-nu	1000		

### ● Parameter 3 group [PAr 3]

Parameter	Factory default	Parameter	Factory default	Parameter	Factory default	Parameter	Factory default
I-n-E	PCRH	H-SC	1000	o-Ft	HERE (standard)	o15r	Send
Unit E	oC	dUnt	oPo		H-C (heating & cooling)	o16R	4-20
L-rG	0000	I-n-b	0000	C-nd	P1 d (standard)	oUe2	Curr
H-rG	1000	ñRuF	000.1		PP (heating & cooling)	o26R	4-20
dot	0.0	L-5u	-200		Eun I	H-E	020.0 (relay)
L-SC	0000	H-5u	1350	oUe I	Curr	C-E	002.0 (SSR)

### ● Parameter 4 group [PAr 4]

Parameter	Factory default	Parameter	Factory default	Parameter	Factory default	Parameter	Factory default
RL-1	duCC	A2.n	no	LbRt	0000	bPS	96
RL1E	RL-R	A2.on	0000	LbRb	002 (003 <sup>※1</sup> )	PrtY	nOnE
RLHY	001	A2.oF	0000	Aoñ1 (Ro-ñ <sup>※1</sup> )	Pu	StP	2
RLn	no	RL-3	oFF	FSL1 (F5-L <sup>※1</sup> )	-200	rSyt	20
RLon	0000	RL3t	RL-R	FSL1 (F5-H <sup>※1</sup> )	1350	Coñy	EnR
RLoF	0000	A3.HY	001	Aoñ2	Pu		
RL-2	jjds	A3.n	no	FSL2	-200		
RL2t	RL-R	A3.on	0000	FSL2	1350		
A2HY	001	A3.oF	0000	Adr5	01		

### ● Parameter 5 group [PAr 5]

Parameter	Factory default						
ktSu	1	Prñu	0000	LCSu	oFF	LCPS	oFF
dl-2	StoP	Erñu	0000	LCPI	oFF	Pwd	0000
dl-1	oFF	Stñu	0000	LCP2	oFF		
dl-2	oFF	StRL	Cont	LCP3	oFF		
lEñu	RUTE	USEr	Stnd	LCP4	oFF		

※ shaded parameters are only for the new model.

※1: This parameter is for previous models.

# High Performance, General-Purpose, PID Control

## ■ Alarm

### ◎ Alarm operation

Mode	Name	Alarm operation	Description
OFF	—	—	No alarm output
duC	Deviation high-limit alarm	 High deviation: Set as 10°C	If deviation between PV and SV as high-limit is higher than set value of deviation temperature, the alarm output will be ON.
JJu	Deviation low-limit alarm	 Lower deviation: Set as 10°C	If deviation between PV and SV as low-limit is higher than set value of deviation temperature, the alarm output will be ON.
JJuC	Deviation high/low-limit alarm	 Lower deviation: Set as 10°C, High deviation: Set as 20°C	If deviation between PV and SV as high/low-limit is higher than set value of deviation temperature, the alarm output will be ON.
CduJ	Deviation high/low-limit reserve alarm	 Lower deviation: Set as 10°C, High deviation: Set as 20°C	If deviation between PV and SV as high/low-limit is higher than set value of deviation temperature, the alarm output will be OFF.
PuC	Absolute value high limit alarm	 Absolute-value Alarm: Set as 90°C	If PV is higher than the absolute value, the output will be ON.
JJPu	Absolute value low limit alarm	 Absolute-value Alarm: Set as 90°C	If PV is lower than the absolute value, the output will be ON.
LbR	Loop break Alarm	—	It will be ON when it detects loop break.
SbR	Sensor break Alarm	—	It will be ON when it detects sensor disconnection.
HbR	Heater break alarm	—	It will be ON when CT detects heater break.

※H: Alarm output hysteresis [A.HY]

※Availability of the heater burnout alarm function is different by model and control output type.

Model	Control output type	Heater burnout alarm
TK4□□□R□ (Relay output)	Relay output	O
TK4□□□S□ (SSR drive output)	ON/OFF control [Stnd]	O
TK4□□□C□ (Current or SSR drive output)	Cycle control [CYCL]	X
	Phase control [PHAS]	X
	Current output [Cur]	X
	SSR drive output [SSR]	O

※In case of heating&cooling model, heater burnout alarm function can be used in OUT1.

### ◎ Alarm option

Mode	Name	Description
RL - R	Standard alarm	If it is an alarm condition, alarm output is ON. If it is a clear alarm condition, alarm output is OFF.
RL - b	Alarm latch	If it is an alarm condition, alarm output is ON and maintains ON status.
RL - C	Standby sequence 1	First alarm condition is ignored and from second alarm condition, standard alarm operates. When power is supplied and it is an alarm condition, this first alarm condition is ignored and from the second alarm condition, standard alarm operates.
RL - d	Alarm latch and standby sequence 1	If it is an alarm condition, it operates both alarm latch and standby sequence. When power is supplied and it is an alarm condition, this first alarm condition is ignored and from the second alarm condition, alarm latch operates.
RL - E	Standby sequence 2	First alarm condition is ignored and from second alarm condition, standard alarm operates. When re-applied standby sequence and if it is alarm condition, alarm output does not turn ON. After clearing alarm condition, standard alarm operates.
RL - F	Alarm latch and standby sequence 2	Basic operation is same as alarm latch and standby sequence 1. It operates not only by power ON/OFF, but also alarm set value, or alarm option changing. When re-applied standby sequence and if it is alarm condition, alarm output does not turn ON. After clearing alarm condition, alarm latch operates.

※Condition of re-applied standby sequence for standby sequence 1, alarm latch and standby sequence 1: Power ON

Condition of re-applied standby sequence for standby sequence 2, alarm latch and standby sequence 2: Power ON, changing set temperature, alarm temperature [RL 1, RL 2] or alarm operation [RL - 1, RL - 2], switching STOP mode to RUN mode.



# TK Series

## ■ Functions

### ◎ Parameter mask

- This function is able to hide unnecessary parameters to user environment or less frequently used parameters in parameter setting group. You can set this in the comprehensive device management program (DAQMaster).
- Though masked parameters are not displayed in parameter setting group, the parameter set values are applied. For more information, refer to the DAQMaster user manual.
- Visit our web site ([www.autonics.com](http://www.autonics.com)) to download the DAQMaster program and the user manual.

※E.g.)The above is masking auto tuning [**Rt**], cooling proportional band [**C-P**], cooling integral time [**C-I**], cooling derivative time [**C-d**] parameters in parameter 2 group.


Before applying mask **PRr2** → **Rt** → **H-P** → **C-P** → **H-I** → **C-I** → **H-d** → **C-d** ...

After applying mask **PRr2** → **H-P** → **H-I** → **H-d** ...

※This function is for new model.

### ◎ User parameter group [**PRrU**] setting

- This function is able to set the frequently used parameters to the user parameter group. You can quickly and easily set parameter settings.
  - User parameter group can have up to 30 parameters in the comprehensive device management program (DAQMaster). For more information, refer to the DAQMaster user manual.
  - Visit our website ([www.autonics.com](http://www.autonics.com)) to download the DAQMaster program and the user manual.
- ※E.g.)The above is setting user parameter group in the DAQMaster with alarm output 1 low-limit value [**RL 1.L**], alarm output 1 high-limit value [**RL 1.H**], SV-0 set value [**Su-0**] parameter of parameter 1 group, heating hysteresis [**HHY5**], cooling hysteresis [**CHY5**] parameters of parameter 2 group, input correction [**I-n-b**] parameter of parameter 3 group, alarm output 1 hysteresis [**R 1.HY**], alarm output 2 hysteresis [**R2HY**] parameters of parameter 4 group.

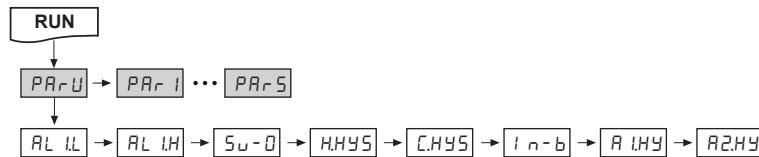

※This function is for new model.

### ◎ Auto tuning [**Rt**]

In PID control, auto-tuning determines the control subject's thermal characteristics and thermal response rate, and then determines the necessary PID time constant. Application of the PID time constant realizes fast response and high precision temperature control.

- Auto-tuning automatically stores PID time constants upon termination. These PID time constants can then be modified by the user to suit their usage environment.
- When auto-tuning is in progress, the AT indicator located on the front of the controller flashes in 1 second intervals. When auto-tuning finishes, the AT indicator automatically goes off and the auto-tuning parameter will return to OFF.

Set value	Descriptions
OFF	Auto tuning end
on	Auto tuning run

Setting group	Parameter	Setting range	Factory default	Unit
PRr2	Rt	OFF/on	OFF	—

※Manual interruption or a sensor disconnection error when auto-tuning is in progress restores the PID time constant to the value used prior to the auto-tuning session.

※Auto-tuning continues to run even if the temperature reading exceeds or falls below the input range.


※When auto-tuning is in progress, parameters can only be referenced and not altered.

※Auto-tuning is not available in manual control.

# High Performance, General-Purpose, PID Control

## ◎ Control output operation mode [ $\alpha - F\ell$ ]

- Control output modes for general temperature control include heating, cooling, and heating and cooling.
- Heating control and cooling control are mutually opposing operations with inverse outputs.
- The PID time constant varies based on the controlled objects during PID control.

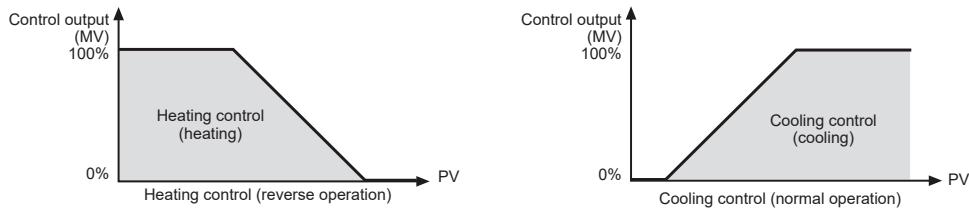

Setting group	Parameter	Setting range	Factory default	Unit
PRr 3	$\alpha - F\ell$	Standard model <i>HEAT/Cool</i>	HEAT	—
		Heating & Cooling model <i>HEAT/Cool/H-C</i>	H-C	—

### • Heating control [HEAT]

Heating control mode: the output will be provided in order to supply power to the load (heater) if PV (Present Value) falls below SV (Set value).

### • Cooling control [Cool]

Cooling control mode: the output will be provided in order to supply power to the load (cooler) if PV (Present Value) rises above SV (Set value).

### • Heating and cooling control [H-C]


Heating and cooling control mode: heating and cooling with a single temperature controller when it is difficult to control subject temperature with only heating or cooling.

Heating and cooling control mode controls the object using different PID time constants for each heating and cooling.

It is also possible to set heating and cooling control in both PID control or ON/OFF control mode.

Heating/cooling output can be selected among Relay output, SSR drive output and current output depending on model types chosen according to your application environment.

(Note that only standard SSR control is available for SSR drive output in OUT2.)

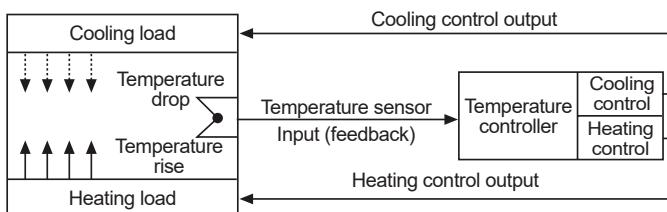

※For heating and cooling control, OUT1 control output is dedicated to heating control and OUT2 control output to cooling control.

## ◎ Control output (OUT1/OUT2) selection [ $\alpha U\ell 1 / \alpha U\ell 2$ ]

- In case of selecting the Models with current control output, both current and SSR drive outputs are available. You can therefore choose the right output type depending on application environments.

- OUT1: Selects OUT1 control output.
- OUT2: Selects OUT2 control output.

Setting group	Parameter	Setting range	Factory default	Unit
PRr 3	$\alpha U\ell 1$	SSr/Curr	SSr	—
	$\alpha U\ell 2$			

SENSORS
CONTROLLERS
MOTION DEVICES
SOFTWARE
(J) Temperature Controllers
(K) SSRs
(L) Power Controllers
(M) Counters
(N) Timers
(O) Digital Panel Meters
(P) Indicators
(Q) Converters
(R) Digital Display Units
(S) Sensor Controllers
(T) Switching Mode Power Supplies
(U) Recorders
(V) HMI
(W) Panel PC
(X) Field Network Devices

# TK Series

## ◎ Communication output

It is for parameter setting and monitoring via external devices (PC, PLC, etc.).


### • Interface

Comm. protocol	Modbus RTU	Comm. speed	2400, 4800, 9600, 19200, 38400 bps
Connection type	RS485	Comm. response wait time	5 to 99 ms
Application standard	Compliance with EIA RS485	Start bit	1-bit (fixed)
Max. connection	31 units (address: 01 to 99)	Data bit	8-bit (fixed)
Synchronous method	Asynchronous	Parity bit	None, Odd, Even
Comm. method	Two-wire half duplex	Stop bit	1-bit, 2-bit
Comm. distance	Max. 800m		

※ It is not allowed to set overlapping communication address at the same communication line.

Use twisted pair wire for RS485 communication.

### • Application of system organization

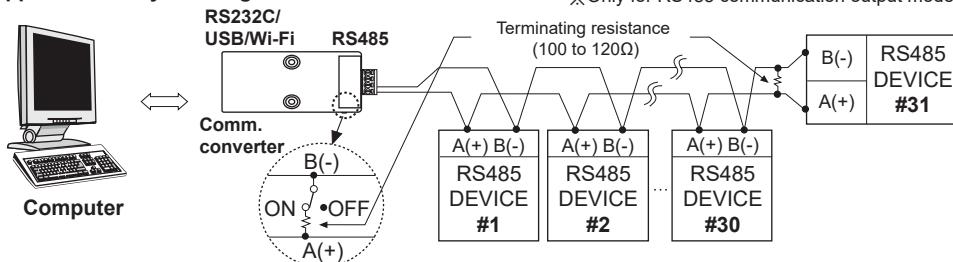

※ It is recommended to use Autonics communication converter: SCM-WF48 (Wi-Fi to RS485·USB wireless communication converter, sold separately), SCM-US48I (USB to RS485 converter, sold separately), SCM-38I (RS232C to RS485 converter, sold separately), SCM-US (USB to Serial converter, sold separately).

Please use twisted pair wire, which is suitable for RS485 communication, for SCM-WF48, SCM-US48I and SCM-38I.

## ◎ For more information, refer to the user manual.

## □ Proper Usage

### ◎ Simple "Error" diagnosis

#### • When the load (heater etc) is not operated

Please check operation of the OUT indicator located in front panel of the unit.

If the OUT indicator does not operate, please check the parameter of all programmed mode.

If OUT indicator is operating, please check the output (Relay, SSR drive voltage) after separating output line from the unit.

#### • When it displays OPEN during operation

This is a warning that external sensor is open.

Please turn off the power and check the wire state of the sensor. If sensor is not open disconnect sensor line from the unit and short the input +, - terminal. Turn on the power of the unit and check the controller displays room temperature.

If this unit cannot display room temperature, this unit is broken. Please remove this unit and contact our service center. (When the input mode is thermocouple, it is available to display room temperature.)

#### • In case of indicating "Error" in display

This Error message is indicated in case of damaging inner chip program data by outer strong noise.

In this case, please send the unit to our after service center after removing the unit from system.

Noise protection is designed in this unit, but it does not stand up strong noise continuously. If bigger noise than specified (Max. 2kV) flows in the unit, it can be damaged.

### ◎ Cautions during use

- Follow instructions in 'Cautions during Use'. Otherwise, It may cause unexpected accidents.
- Check the polarity of the terminals before wiring the temperature sensor.  
For RTD temperature sensor, wire it as 3-wire type, using cables in same thickness and length.  
For thermocouple (CT) temperature sensor, use the designated compensation wire for extending wire.
- Keep away from high voltage lines or power lines to prevent inductive noise.  
In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.  
Do not use near the equipment which generates strong magnetic force or high frequency noise.
- Do not apply excessive power when connecting or disconnecting the connectors of the product.
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- Do not use the unit for other purpose (e.g. voltmeter, ammeter), but temperature controller.
- When changing the input sensor, turn off the power first before changing.  
After changing the input sensor, modify the value of the corresponding parameter.
- 24VAC, 24-48VDC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Do not overlapping communication line and power line.  
Use twisted pair wire for communication line and connect ferrite bead at each end of line to reduce the effect of external noise.
- Make a required space around the unit for radiation of heat.  
For accurate temperature measurement, warm up the unit over 20 min after turning on the power.
- Make sure that power supply voltage reaches to the rated voltage within 2 sec after supplying power.
- Do not wire to terminals which are not used.
- This unit may be used in the following environments.
  - ① Indoors (in the environment condition rated in 'Specifications')
  - ② Altitude max. 2,000m
  - ③ Pollution degree 2
  - ④ Installation category II